


METER

■ COMBINATION METER

- Oil replacement reminder light has been established in the combination meter, which will light or flash to remind the driver to change the engine oil depending on the vehicle driving distance.
- Lighting and flashing of the oil replacement reminder light is controlled based on the accumulated mileage memorized in the meter ECU.
- After the engine oil has been changed, accumulated mileage memorized in the meter ECU should be reset. At this point, the accumulated mileage is reset to 0 and the cycle begins again.
- When the following conditions are satisfied, the meter ECU will light on or flash the oil replacement reminder light.
 - When turning the ignition switch on, the meter ECU will light on the oil replacement reminder light for 3 seconds for the bulb check.
 - In case that the mileage after resetting the accumulated mileage memorized in the meter ECU exceeded 5,000 miles, the meter ECU will flash the oil replacement reminder light for 12 seconds after the bulb check and remind the driver that the engine oil changing time is near at hand.
 - In case that the mileage after resetting the accumulated mileage memorized in the meter ECU exceeded 7,500 miles, the meter ECU will keep on lighting the oil replacement reminder light after the bulb check and remind the driver to change the engine oil.

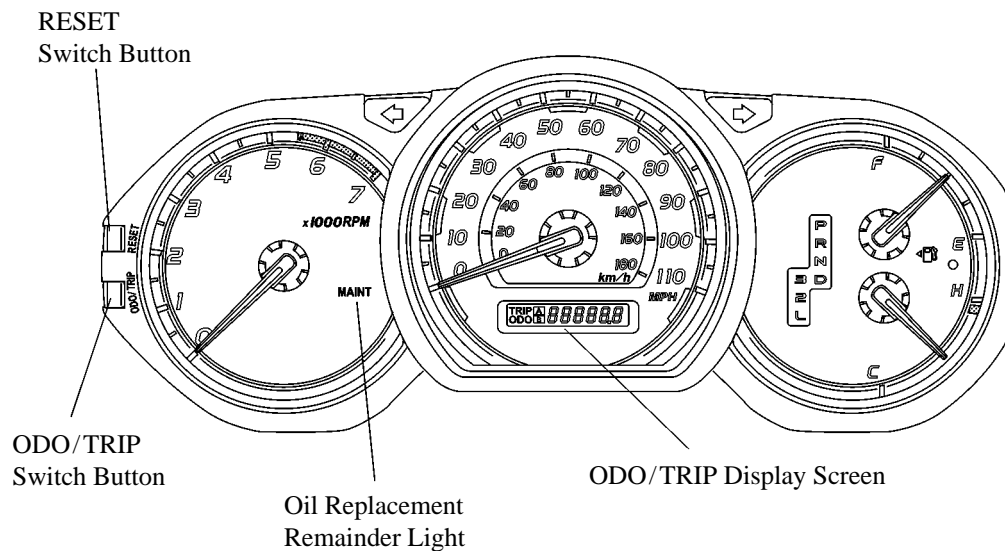

238CH34

Service Tip

The accumulated mileage memorized in the meter ECU can be reset by the following procedures.

- 1) Turn the ignition on and make sure that the ODO/TRIP display screen is in the ODO mode. (reset procedure will not work in the TRIP mode)
- 2) Turn the ignition off. While pressing the RESET switch button, turn the ignition on. (Note: hold the button down throughout the entire reset procedure)
- 3) Observe the oil replacement reminder light. The light should go on solid for 3 seconds, then blink for 2 seconds, then go on solid for 1 second, and then go off.
- 4) When the light goes off, release the RESET switch button.
- 5) Turn the ignition off. Turn the ignition on again and confirm that the oil replacement reminder light goes on for 3 seconds and then goes off.
- 6) This completes the reset procedure.