


■ SEAT HEATER

- The seat heater for the driver and passenger seats are provided as standard equipment on the Limited grade model.
- By operating the dial-type seat heater control switch, which is located in the console box, the temperature can be controlled steplessly within the range of 32°C to 39°C (90°F to 102°F).
- Whether the seat heater is ON or OFF can be determined by illuminating condition of the indicator light of the seat heater control switch.

► System Diagram ◀

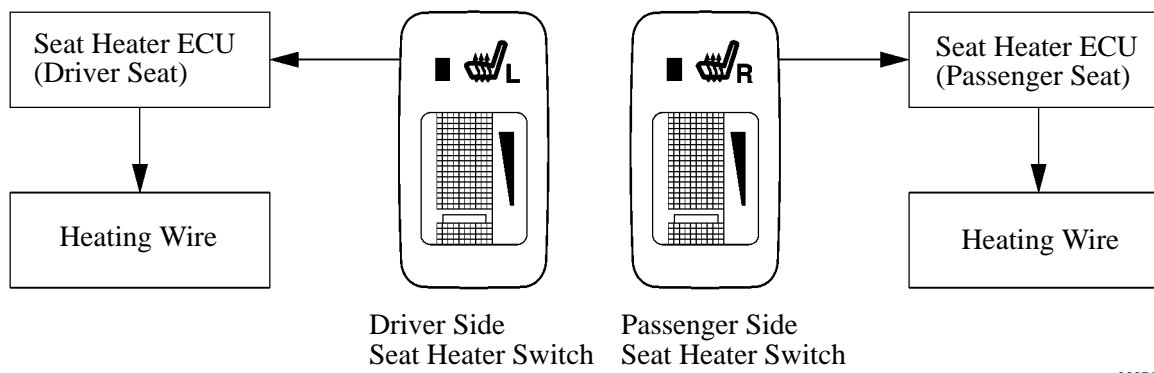

232BE57

Driver Side

Passenger Side