


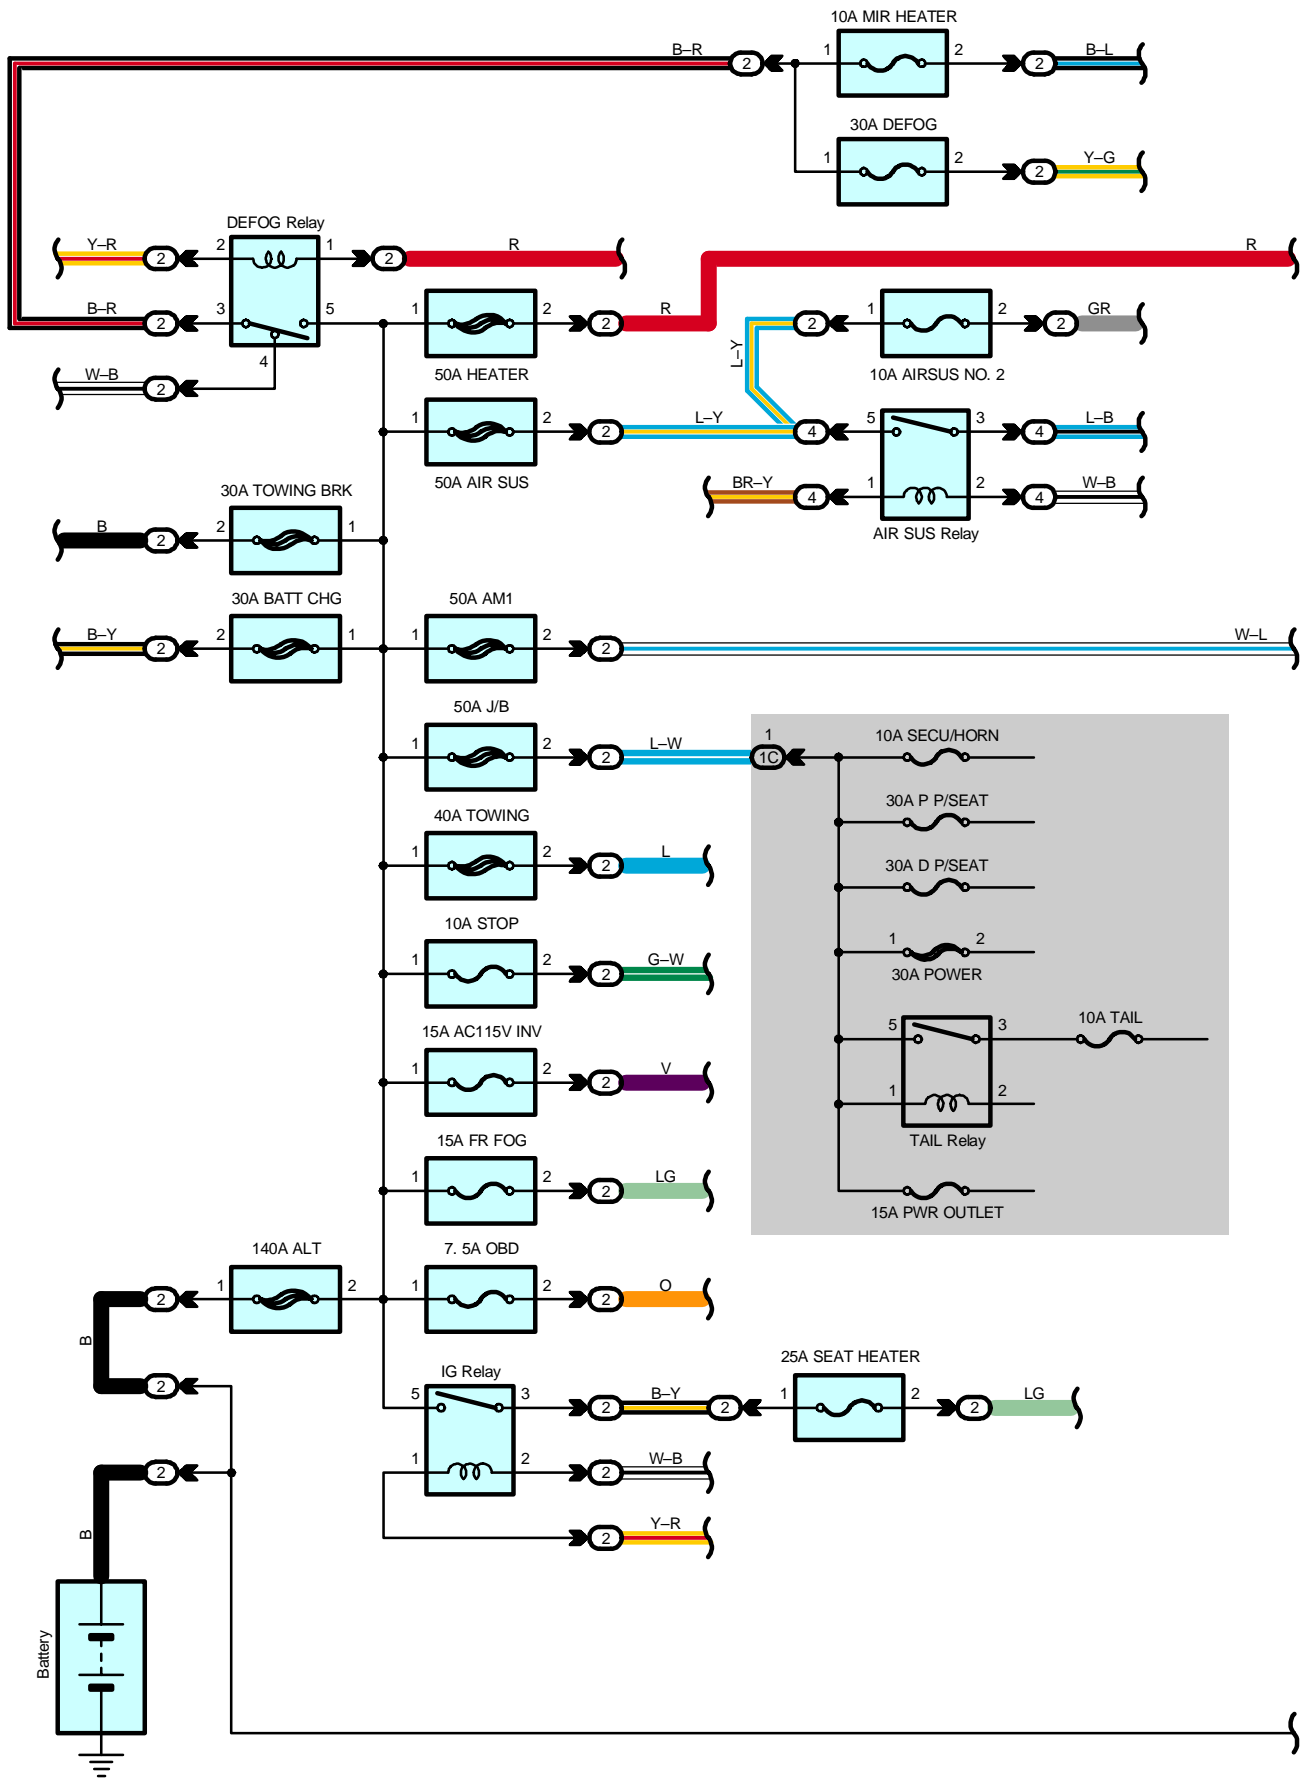


Power Source

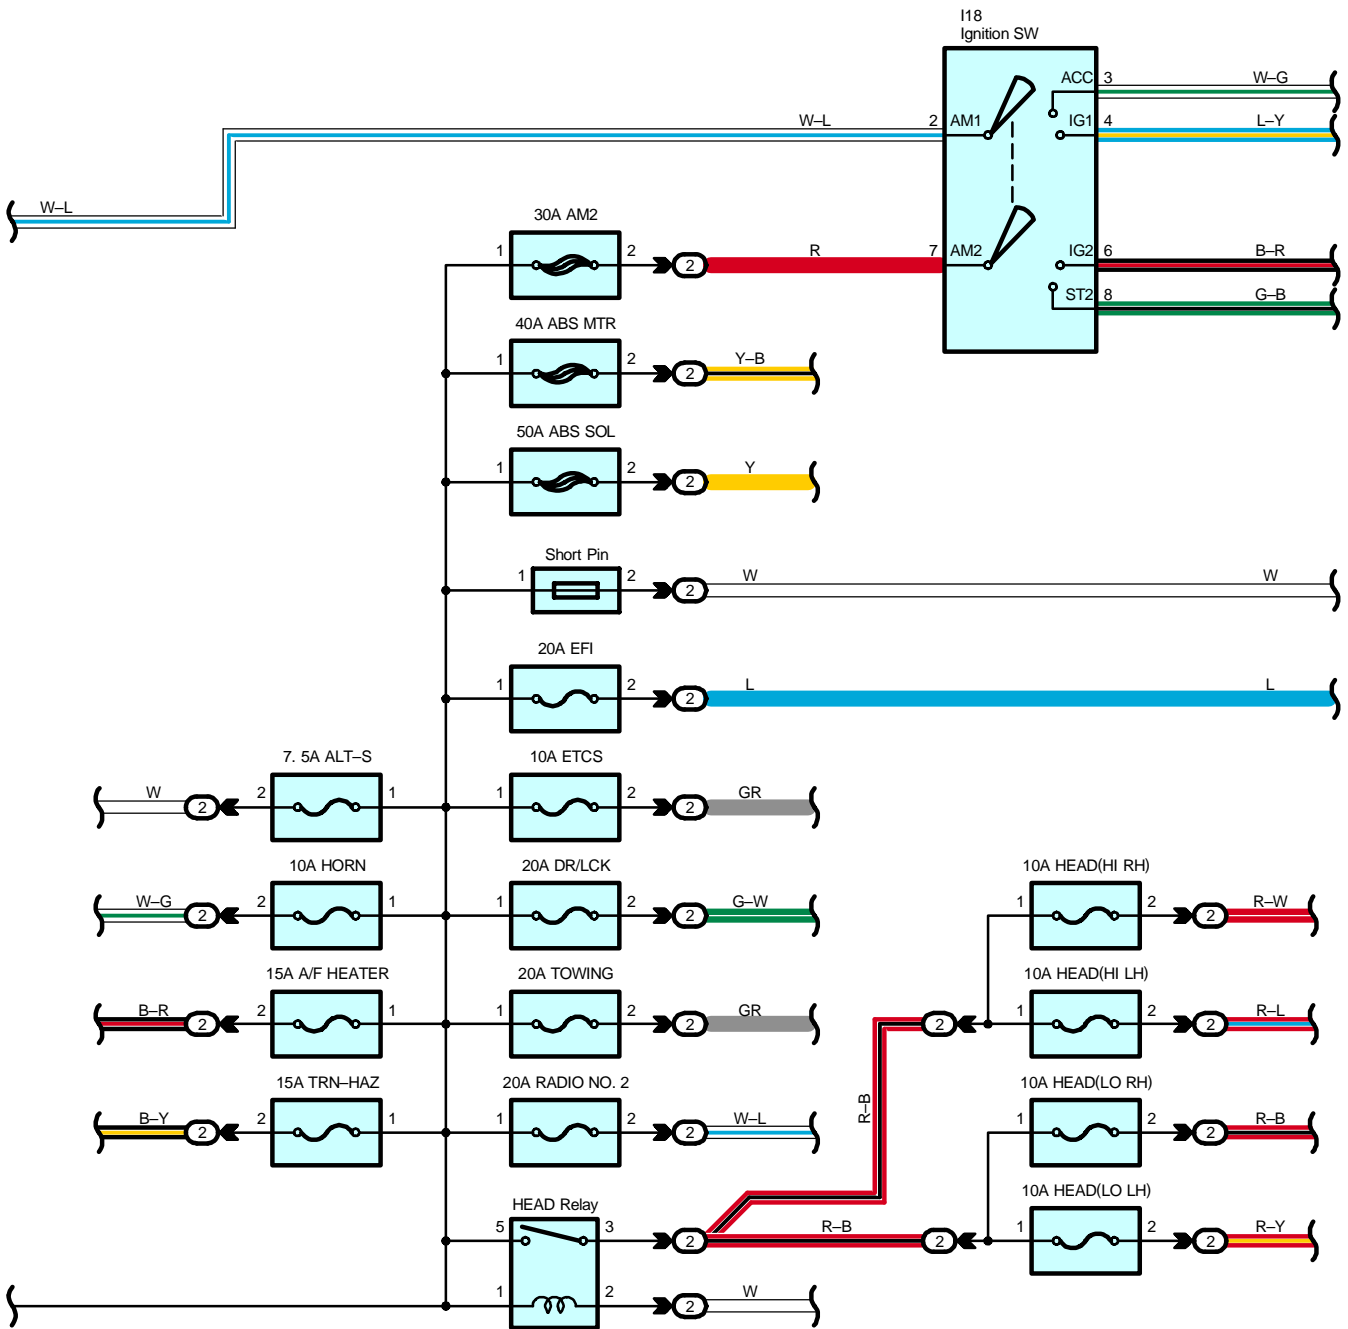

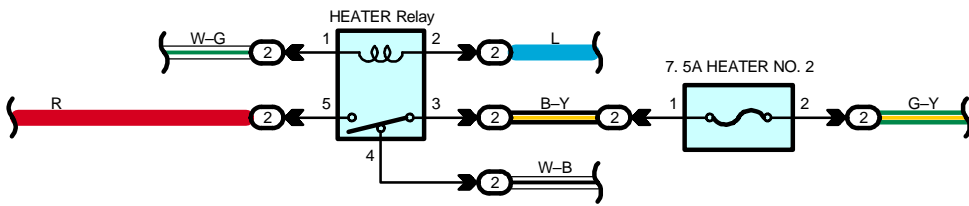

Power Source

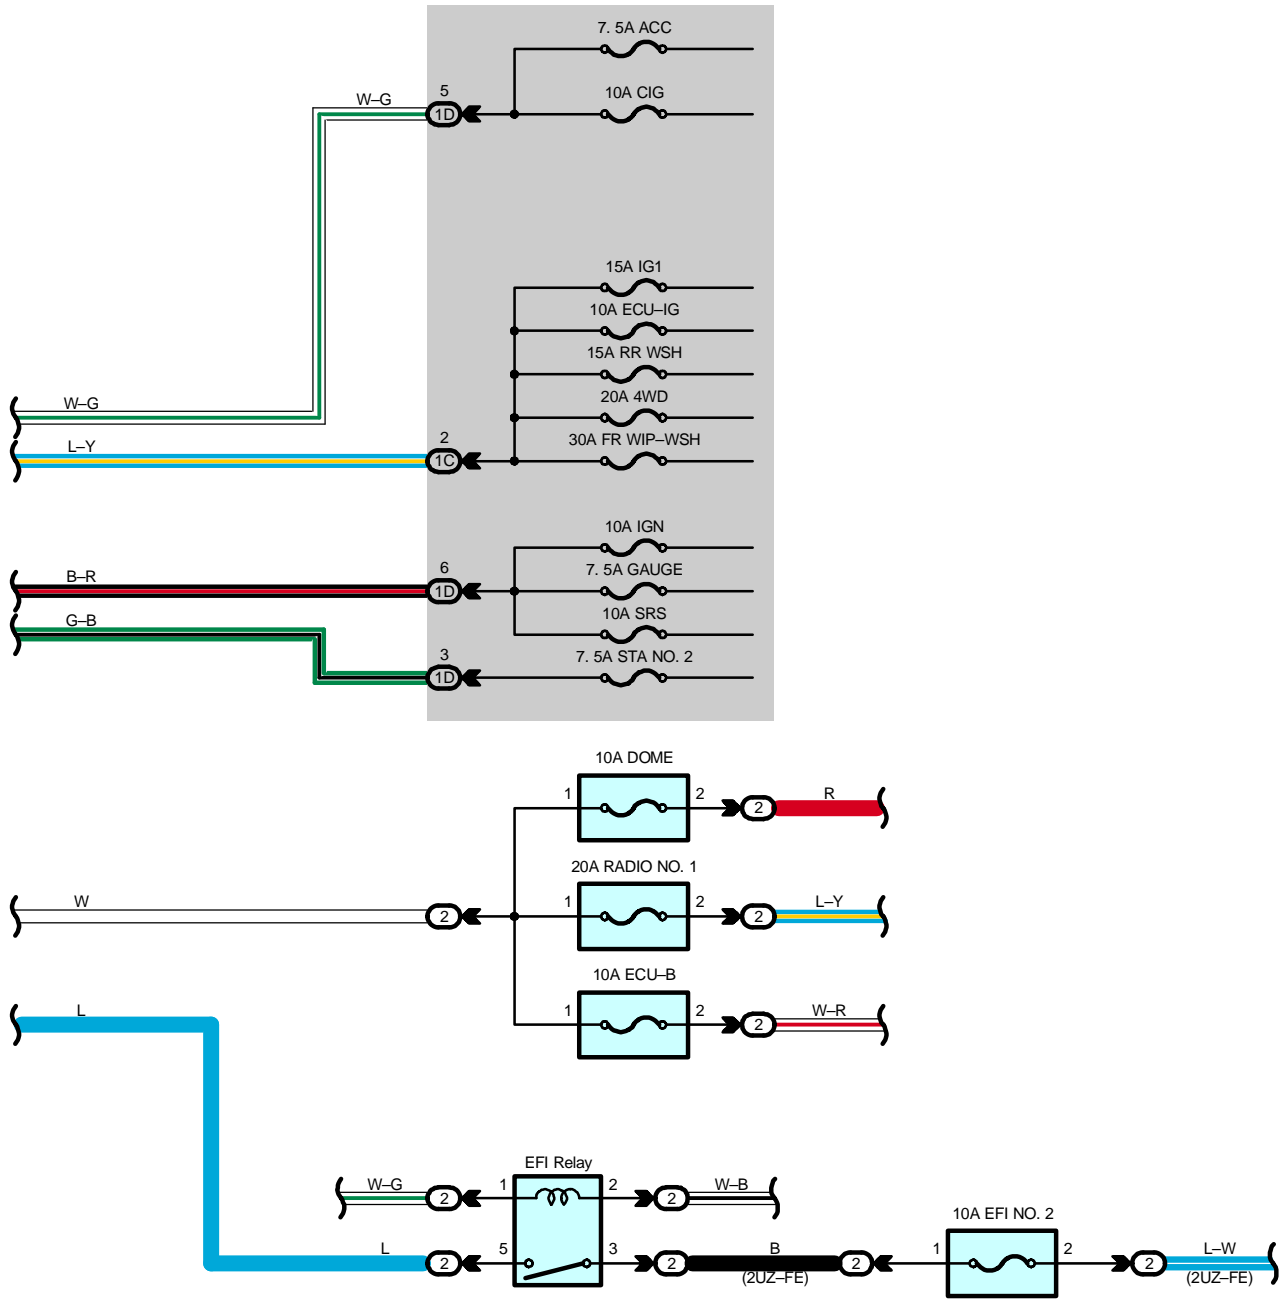

Service Hints

HEAD Relay

- 5-3 : Closed with light control SW at HEAD position or dimmer SW at FLASH position
- Closed with engine running and parking brake lever released (w/ daytime running light)

I18 Ignition SW

- 2-3 : Closed with ignition key at ACC or ON position
- 2-4 : Closed with ignition key at ON or ST position
- 7-6 : Closed with ignition key at ON or ST position
- 7-8 : Closed with ignition key at ST position

TAIL Relay

- 3-5 : Closed with light control SW at TAIL or HEAD position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
I18	37				

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
4	23	Engine Room R/B No.4 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D		