



Ignition (1GR-FE)

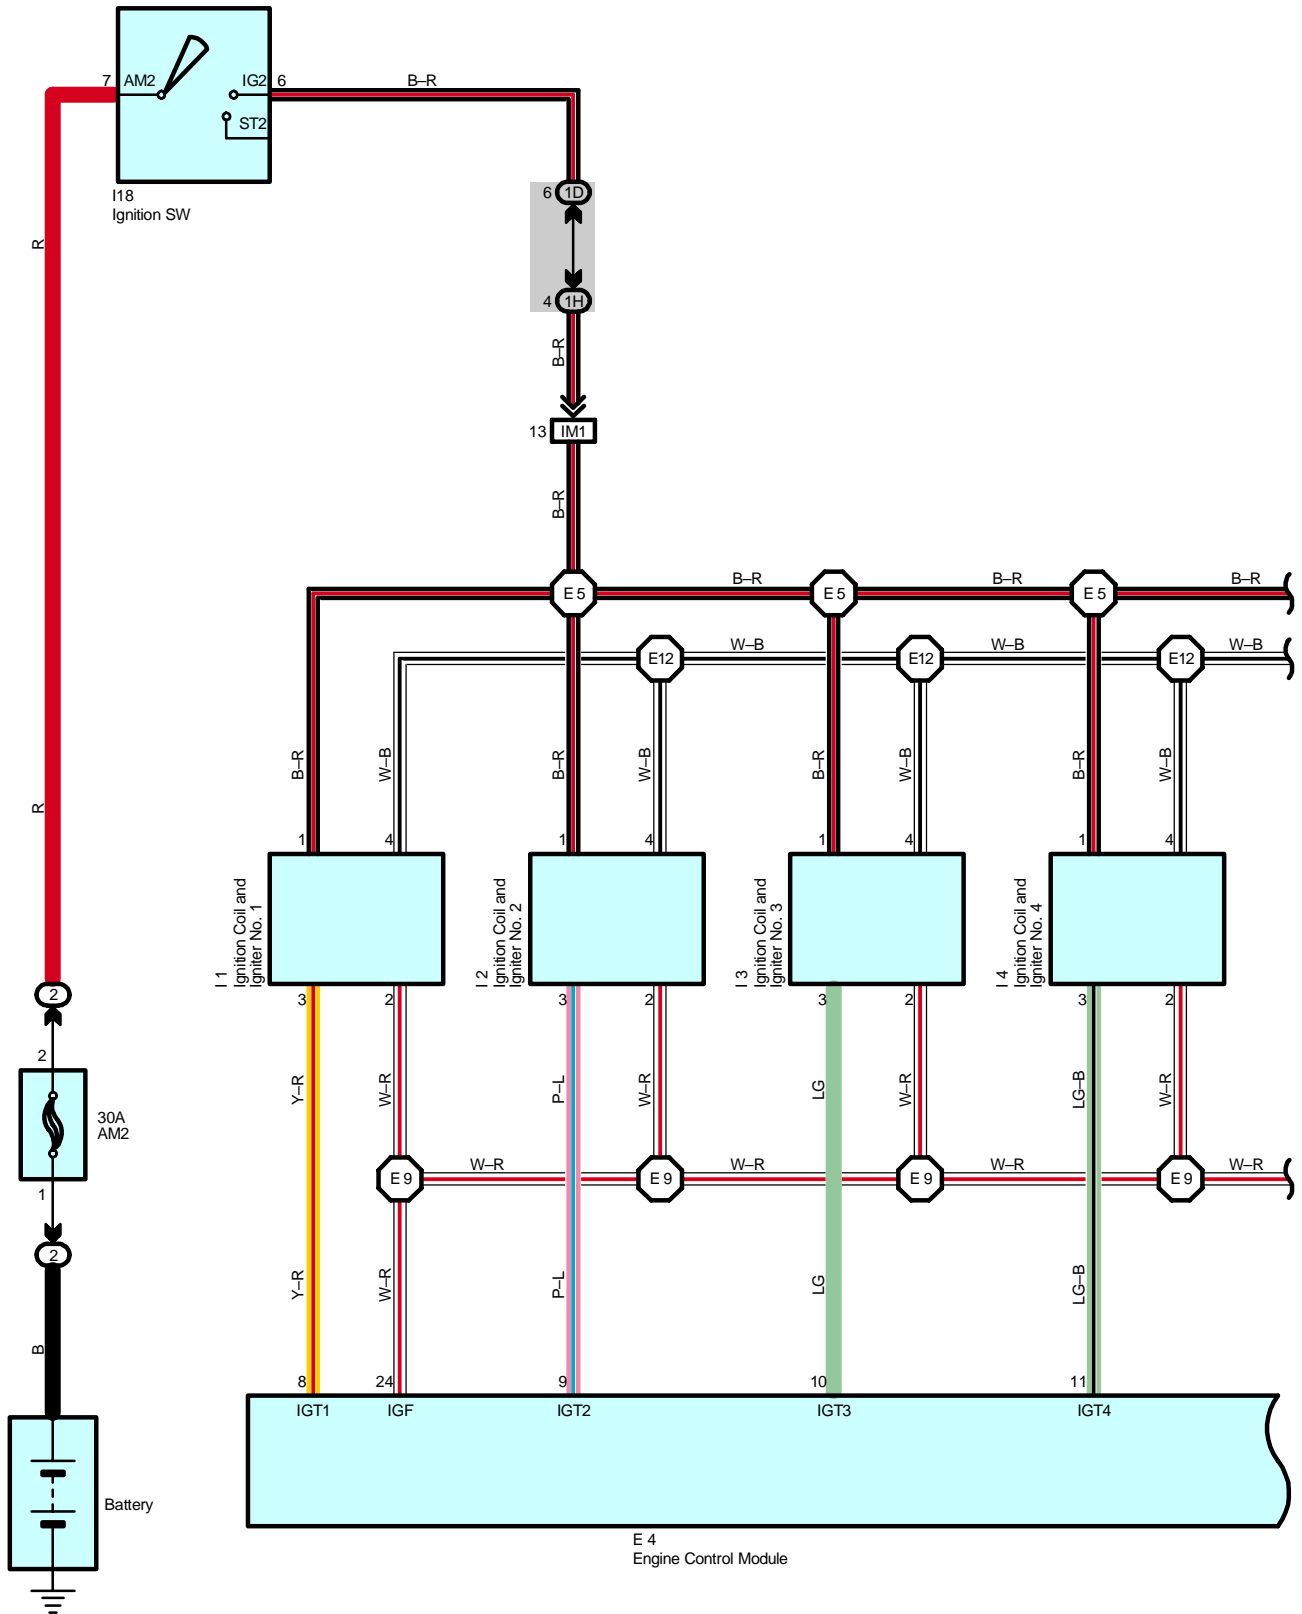

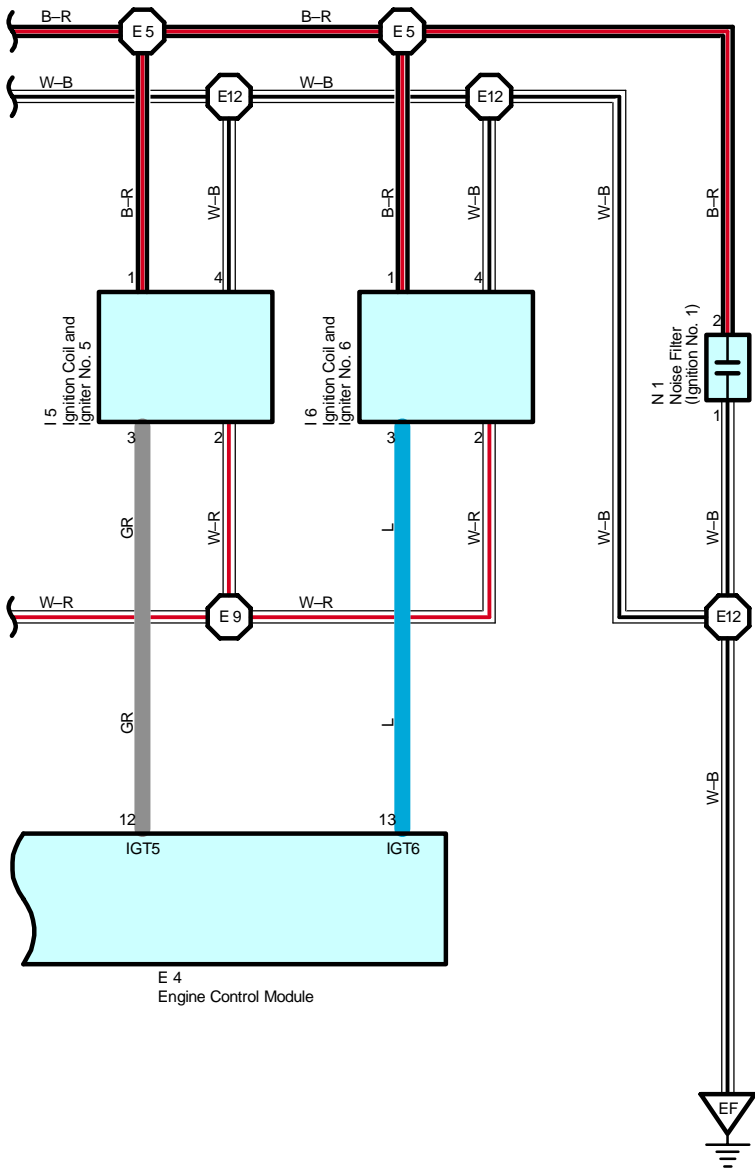

Ignition (1GR-FE)

Service Hints

I18 Ignition SW

7-6 : Closed with the ignition SW at ON or ST position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
E4	37	I3	35 (1GR-FE)	I6	35 (1GR-FE)
I1	35 (1GR-FE)	I4	35 (1GR-FE)	I18	37
I2	35 (1GR-FE)	I5	35 (1GR-FE)	N1	35 (1GR-FE)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IM1	52	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)

▽ : Ground Points

Code	See Page	Ground Points Location
EF	46 (1GR-FE)	Rear Side of Left Bank Cylinder Block

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	46 (1GR-FE)	Engine Wire	E12	46 (1GR-FE)	Engine Wire
E9					

