



Front Fog Light

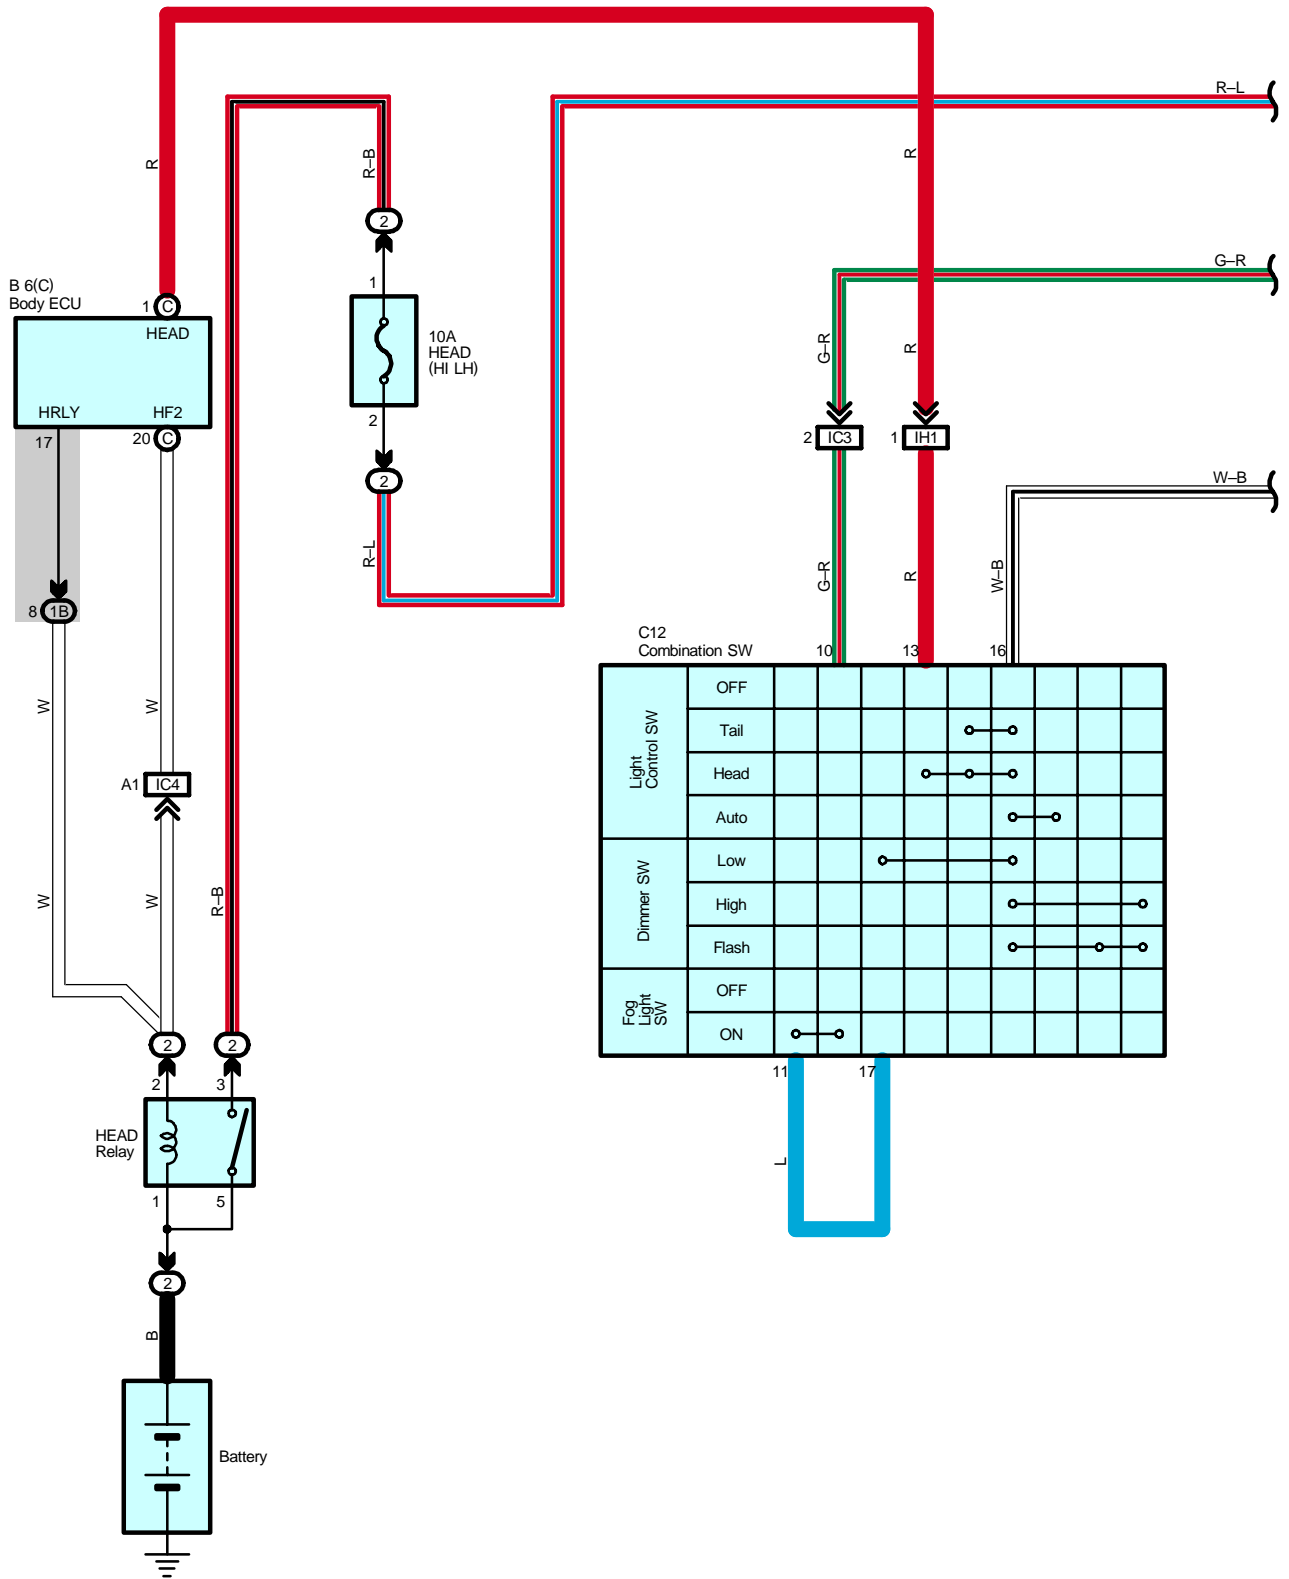

From Power Source System (See Page 58)

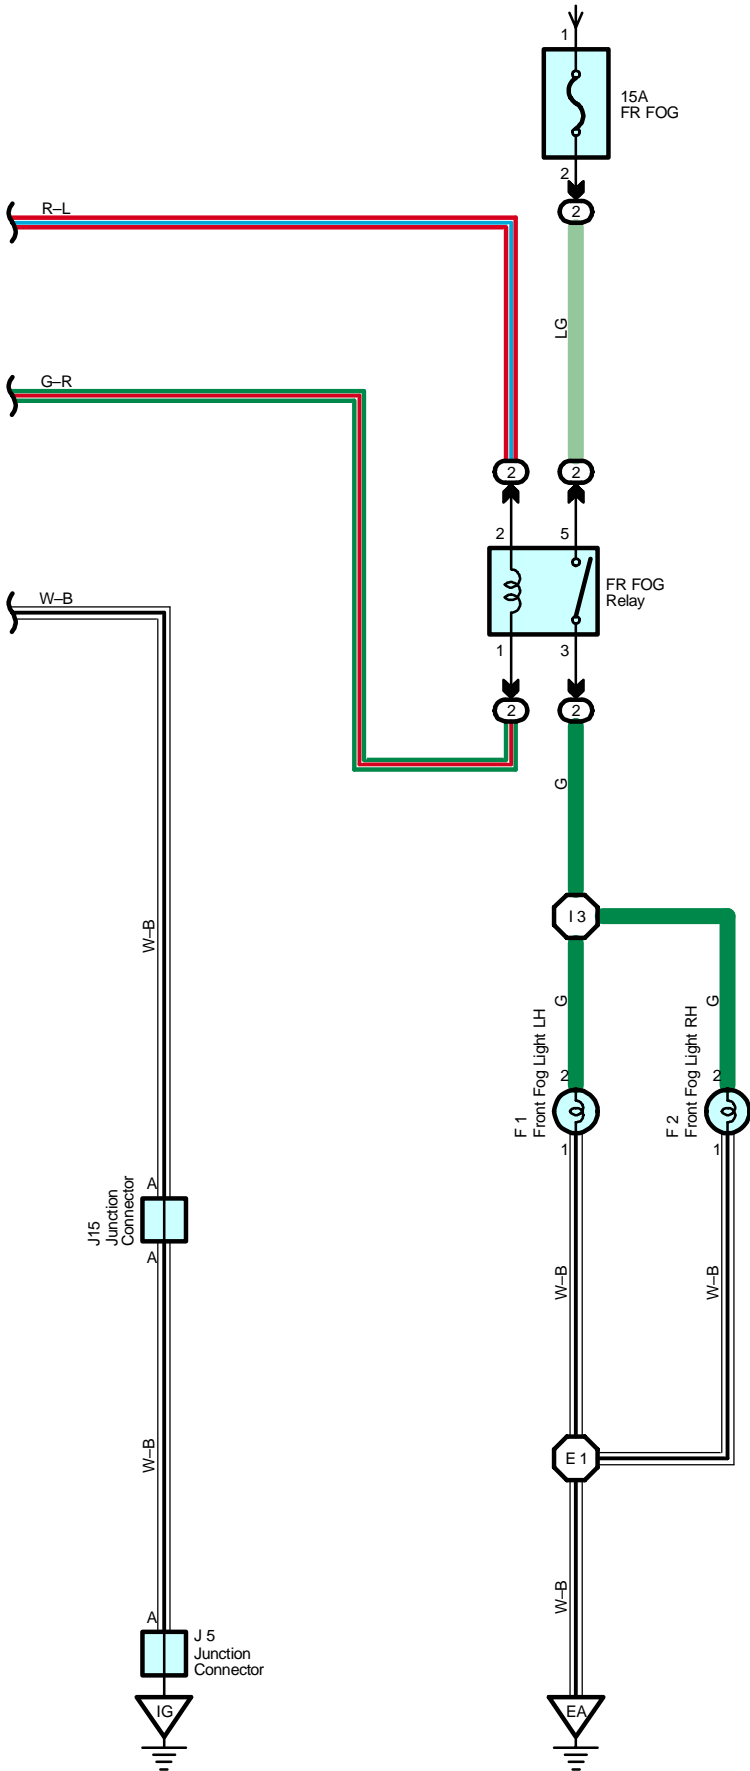

Front Fog Light

Service Hints

FR FOG Relay

3-5 : Closed with light control SW at HEAD position, dimmer SW at LOW position and fog light SW at ON position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
B6	C	36	F1	34 (1GR-FE)	J5	38
C12	37	F2	32 (2UZ-FE)	J15	38	
F1	32 (2UZ-FE)		34 (1GR-FE)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC4		
IH1	50	Instrument Panel Wire and Instrument Panel Wire (Behind the Combination Meter)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	44 (2UZ-FE)	Front Right Fender
	46 (1GR-FE)	
IG	48	Left Kick Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	44 (2UZ-FE)	Engine Room Main Wire	I3	50	Engine Room Main Wire
	46 (1GR-FE)				

