



Seat Belt Warning

System Outline

When the driver has not fastened the seat belt while the ignition SW is ON, the driver seat belt warning light blinks, and a warning buzzer comes on.
Also, in the front passenger seat, a sensor recognizes passenger, and when the passenger has not fastened the seat belt, the front passenger seat belt warning light blinks.

Service Hints

B12 Buckle SW LH

3-4 : Continuity with driver's seat belt in use

B13 Buckle SW RH

Occupant Detection Sensor

2-3 : Continuity with front passenger sit on front passenger seat and front passenger's seat belt not use

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page		
B4	A	36	D3	37	J20	A	38
B12	42	J5	38	J21	B	38	
B13	42	J7	38	J25	38		
C9	B	37	J8	A	38		
C10	C	37	J9	B	38		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H		
1J		
3C	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM1	52	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
IO1	52	Instrument Panel Wire and Floor Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EF	44 (2UZ-FE)	Rear Side of Left Bank Cylinder Block
	46 (1GR-FE)	
IG	48	Left Kick Panel
BL	54	Floor Seat Crossmember LH
BM	54	Floor Seat Crossmember RH

