



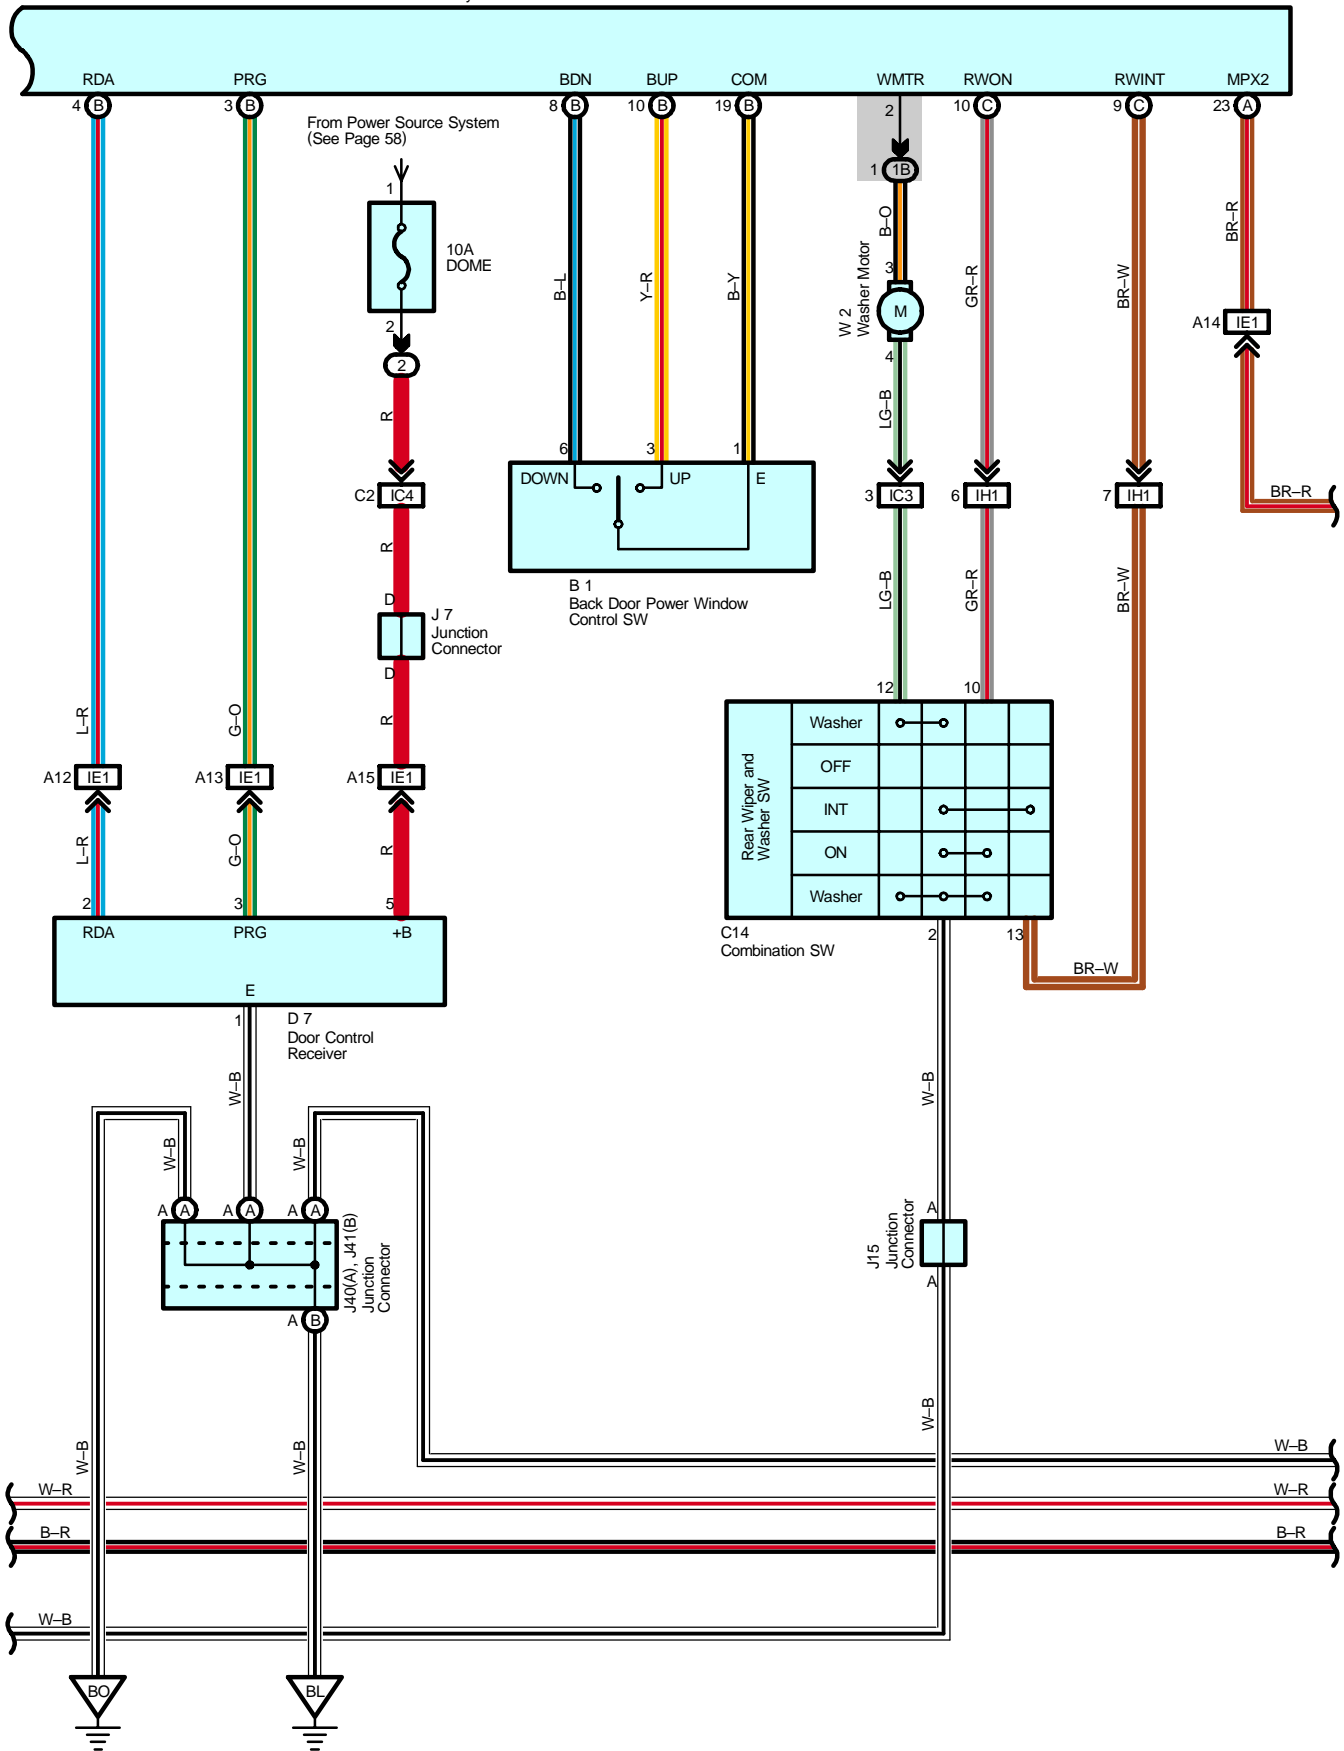


B 4(A), B 5(B), B 6(C)  
Body ECU

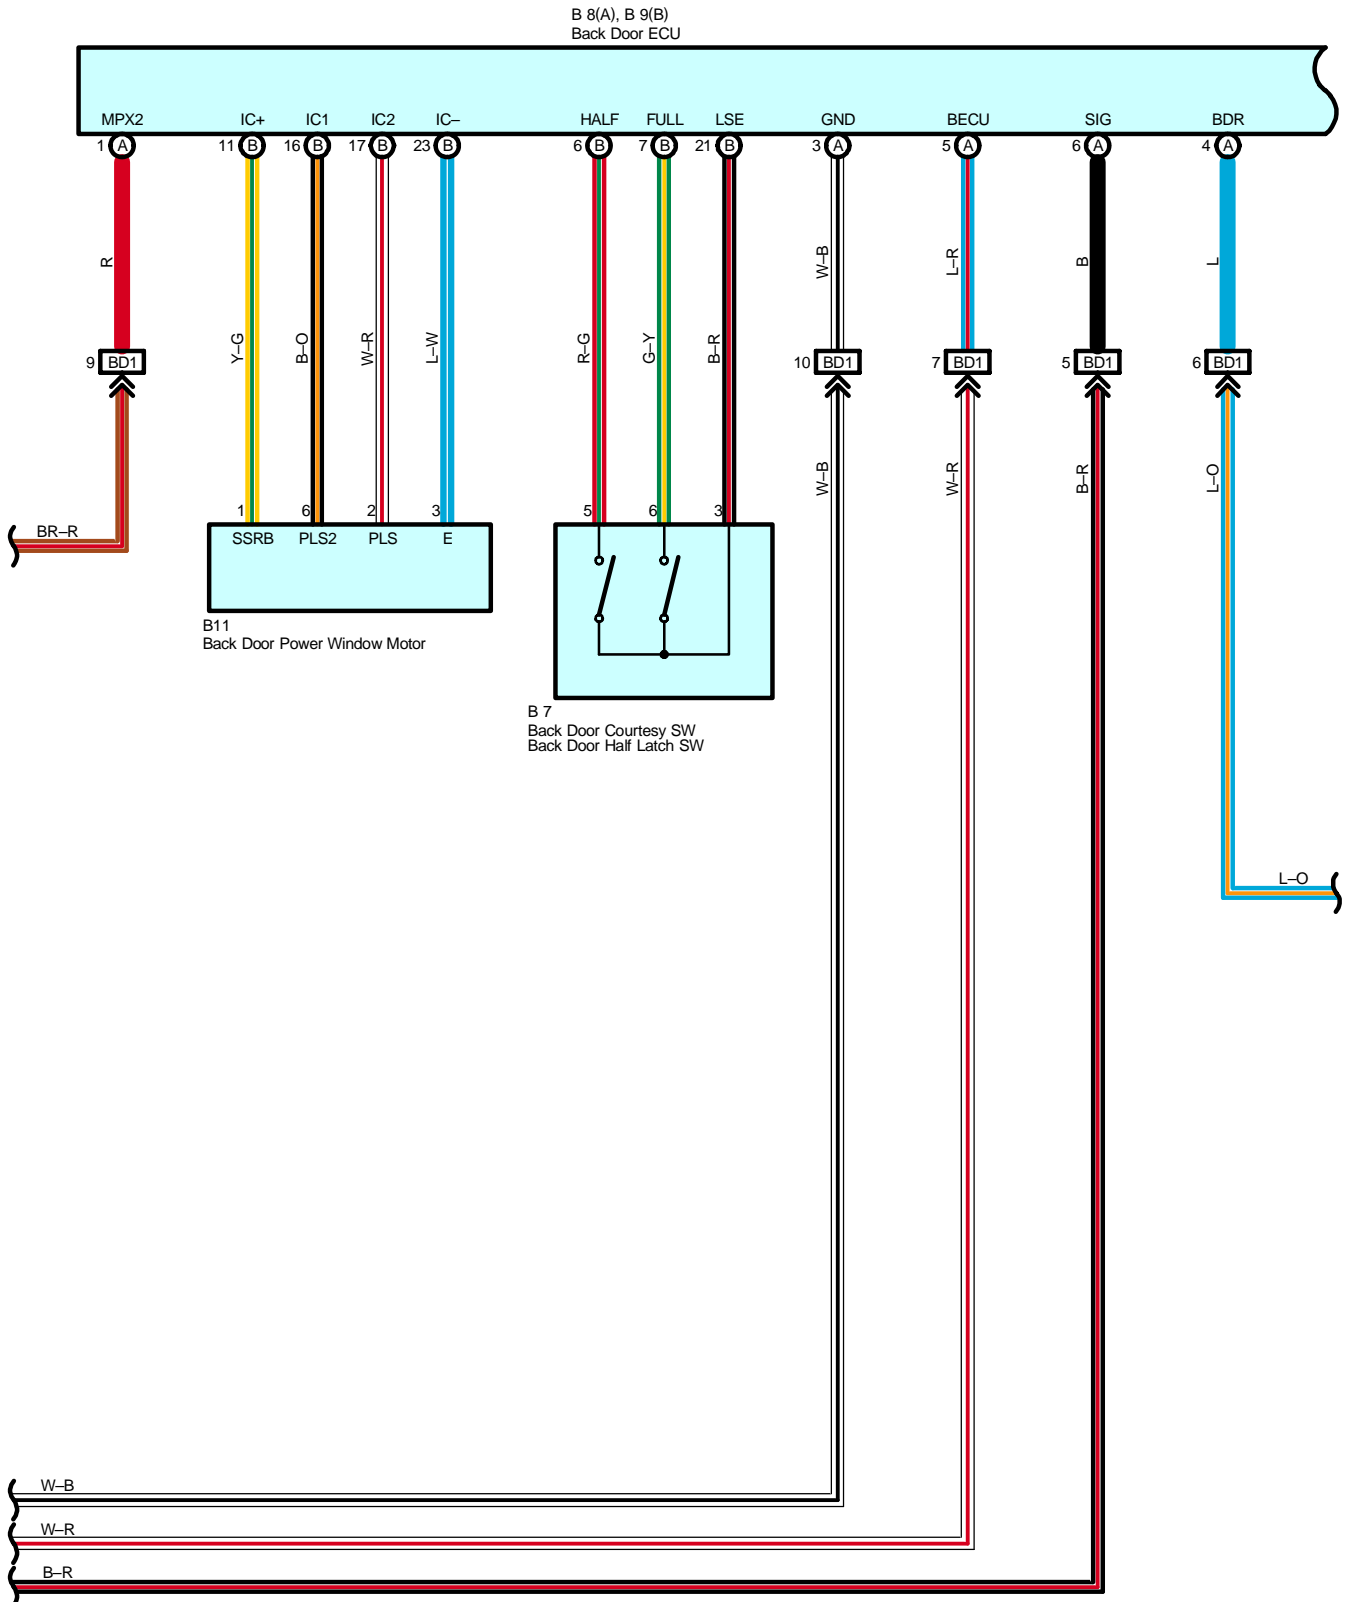

# Rear Wiper and Washer



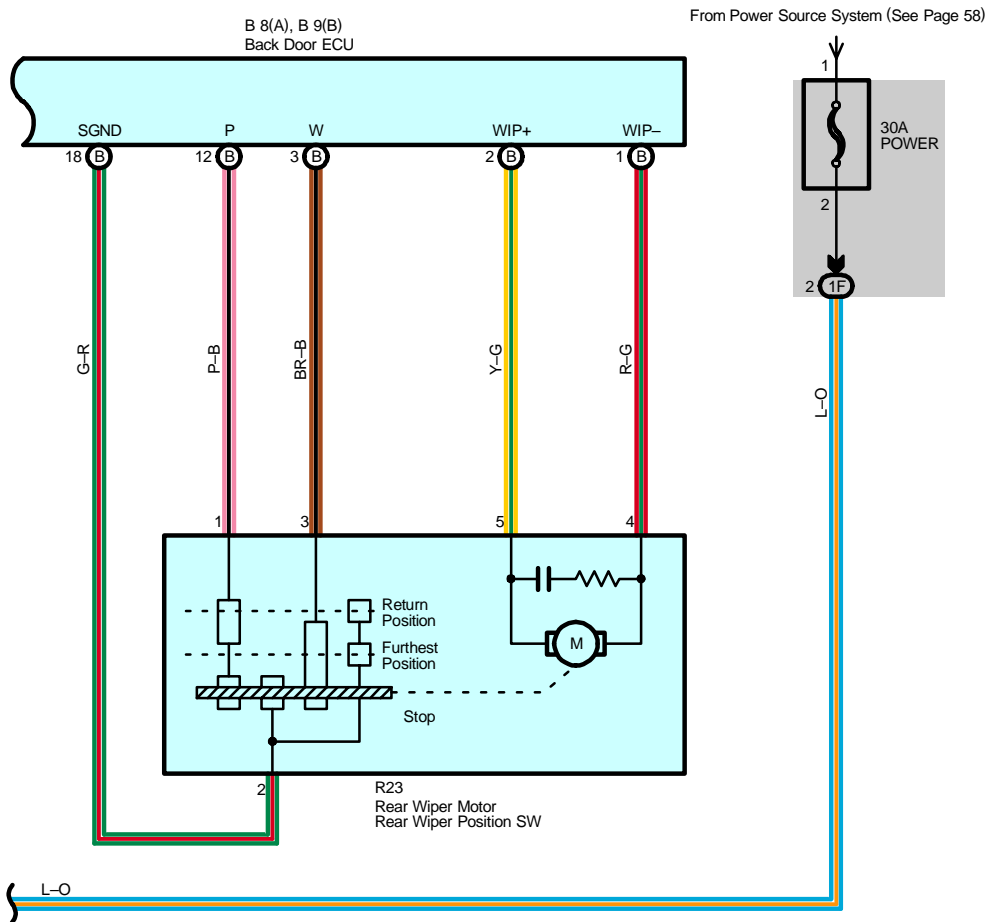

# Rear Wiper and Washer

## System Outline

### \* Rear wiper operation

The back door ECU initiates rear wiper intermittent or continuous operation according to rear wiper SW command from the body ECU. At this point, the position of the back door window is confirmed and, if it is not fully closed, the command will be neglected preventing the rear wiper from starting.

If the ignition SW is turned OFF while the rear wiper is operating, it comes to a stop but only after the wiper arm has returned to its initial position.

### \* Rear washer operation

Turning the rear washer SW ON, with the ignition SW ON and the back door window fully closed, initiates rear washer operation.

## Service Hints

### C14 Combination SW

10-Ground : Continuity with the rear wiper SW at ON position

13-Ground : Continuity with the rear wiper SW at INT position

2-Ground : Always continuity

### Body ECU

22-Ground : Approx. 12 volts with ignition SW at ACC or ON position

1, 10-Ground : Approx. 12 volts with ignition SW at ON position

11-Ground : Always approx. 12 volts

4, 16-Ground : Always continuity

### B8 (A) Back Door ECU

(A) 6-Ground : Approx. 12 volts with ignition SW at ON position

(A) 4, (A) 5-Ground : Always approx. 12 volts

(A) 3-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B1	36	B9	B 40	J15	38
B4	A 36	B11	40	J40	A 40
B5	B 36	C14	37	J41	B 40
B6	C 36	D7	40	R23	41
B7	40	J5	38	W2	33 (2UZ-FE)
B8	A 40	J7	38		35 (1GR-FE)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC4		
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IH1	50	Instrument Panel Wire and Instrument Panel Wire (Behind the Combination Meter)
BD1	54	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)



**: Ground Points**

Code	See Page	Ground Points Location
IG	<a href="#">48</a>	Left Kick Panel
BL	<a href="#">54</a>	Floor Seat Crossmember LH
BO	<a href="#">54</a>	Rear Pillar LH