


Power Outlet (12V)

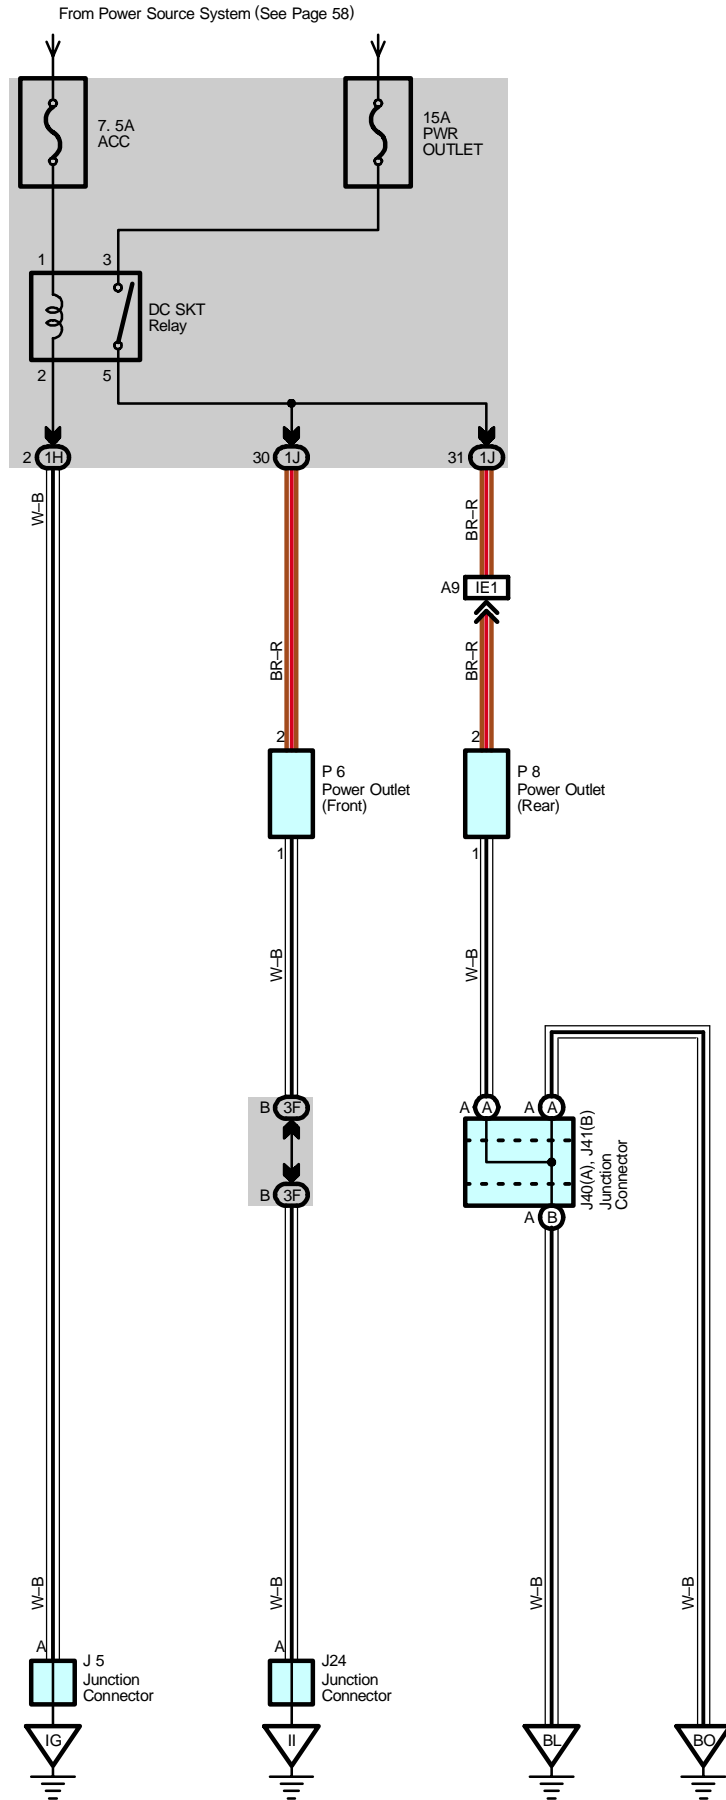

Service Hints**DC SKT Relay**

3-5 : Closed with ignition SW at ACC or ON position

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
J5	38	J40	A 40	P6	39
J24	38	J41	B 40	P8	41

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
3F	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
IG	48	Left Kick Panel
II	48	Instrument Panel Brace RH
BL	54	Floor Seat Crossmember LH
BO	54	Rear Pillar LH