


Electric Tension Reducer

From Power Source System (See Page 58)

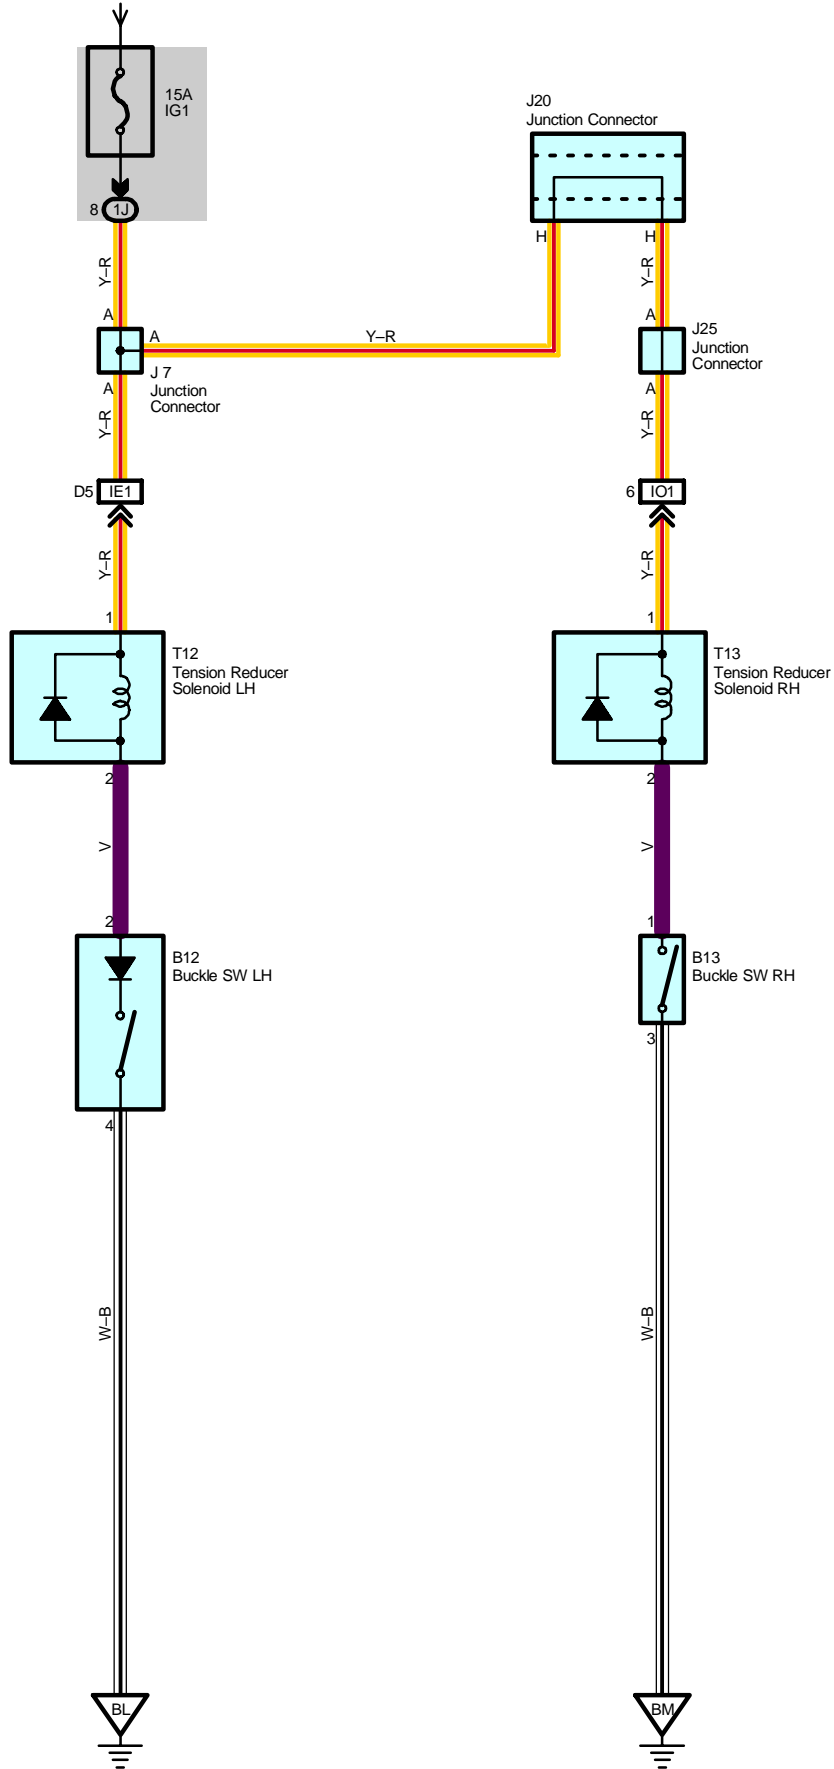

Service Hints

B12 Buckle SW LH

2-4 : Closed with the driver seat belt in use

B13 Buckle SW RH

1-3 : Closed with the front passenger seat Belt in use

T12, T13 Tension Reducer Solenoid LH, RH

1-Ground : Approx. 12 volts with the ignition SW at ON position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B12	42	J20	38	T13	41
B13	42	J25	38		
J7	38	T12	41		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IO1	52	Instrument Panel Wire and Floor Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BL	54	Floor Seat Crossmember LH
BM	54	Floor Seat Crossmember RH