



Seat Heater

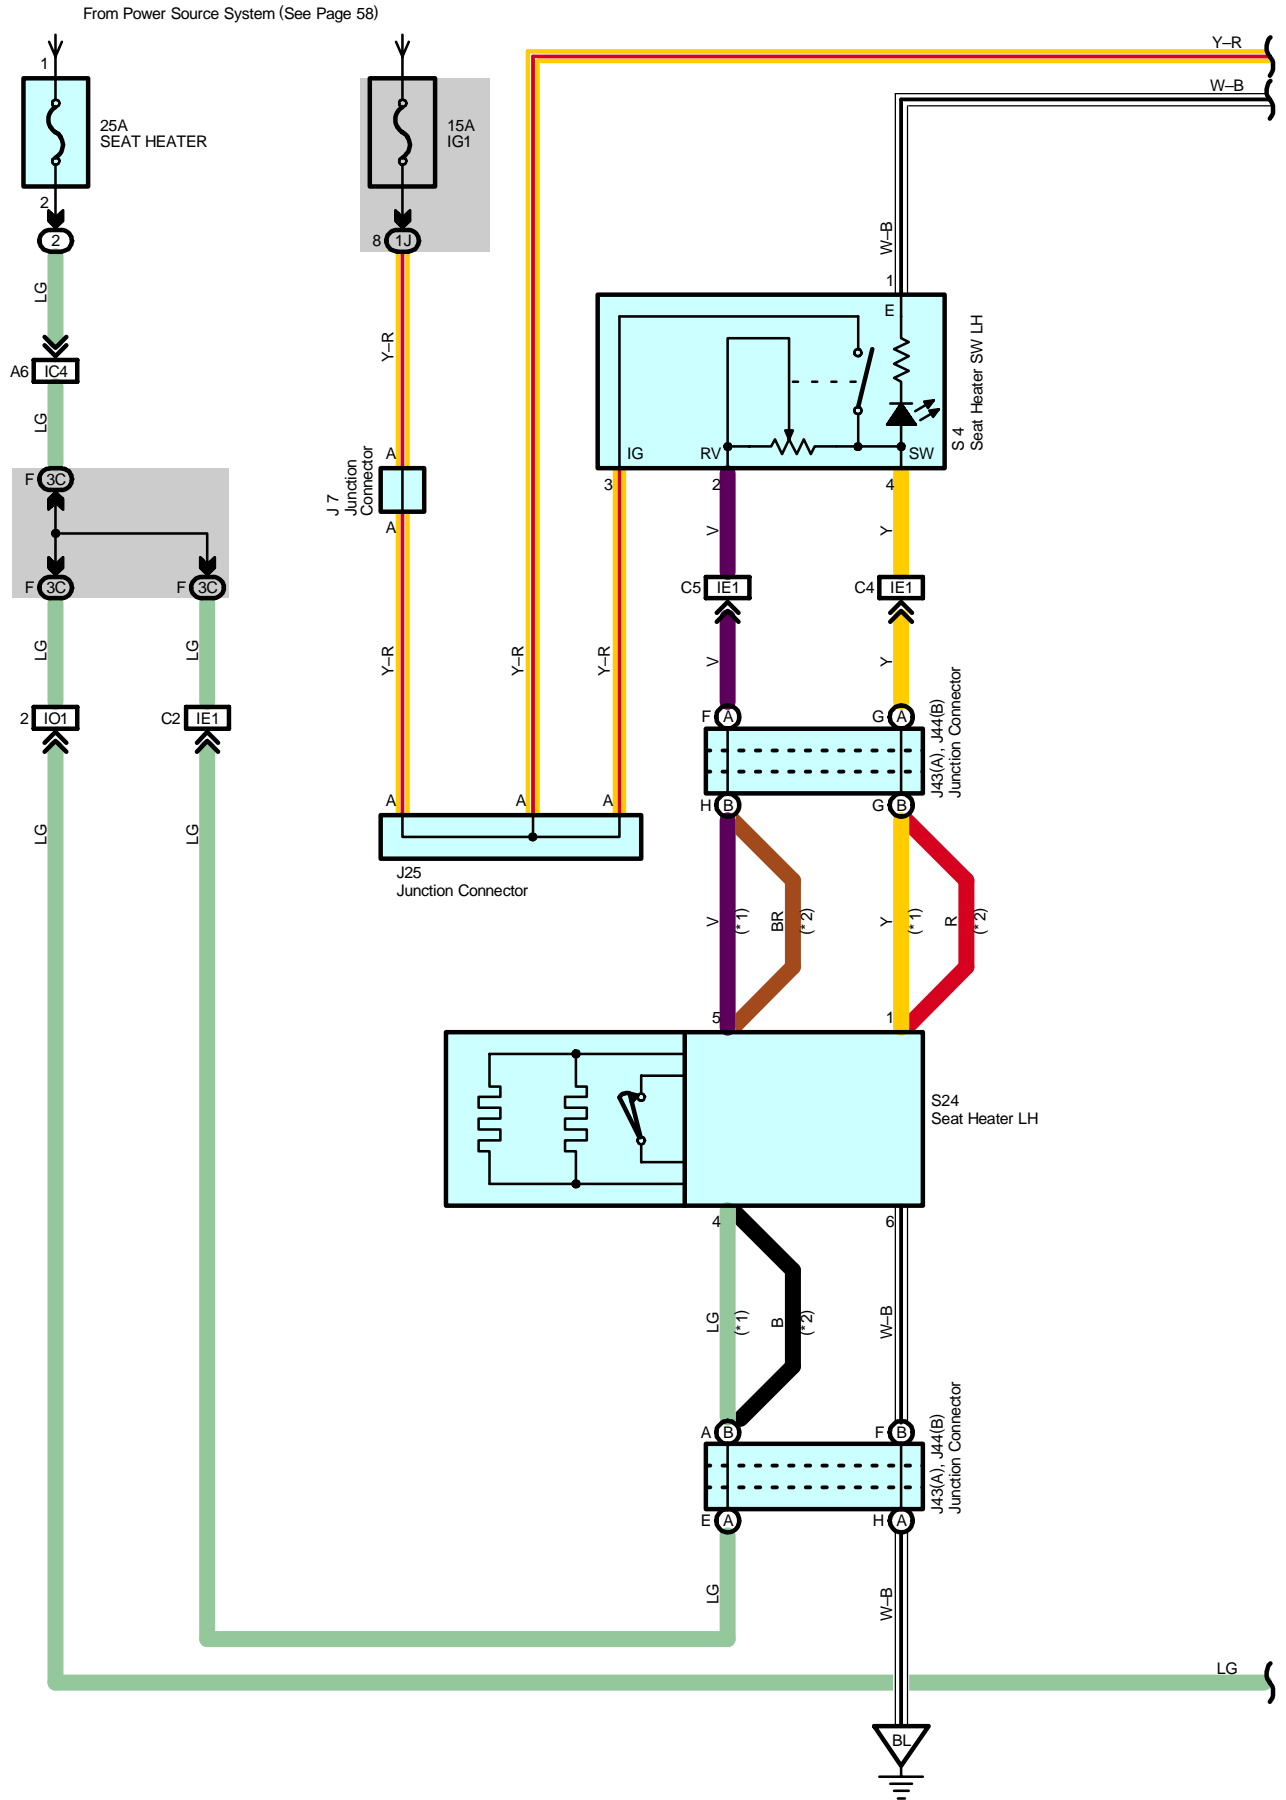

* 1 : Limited
 * 2 : SR5 Grade

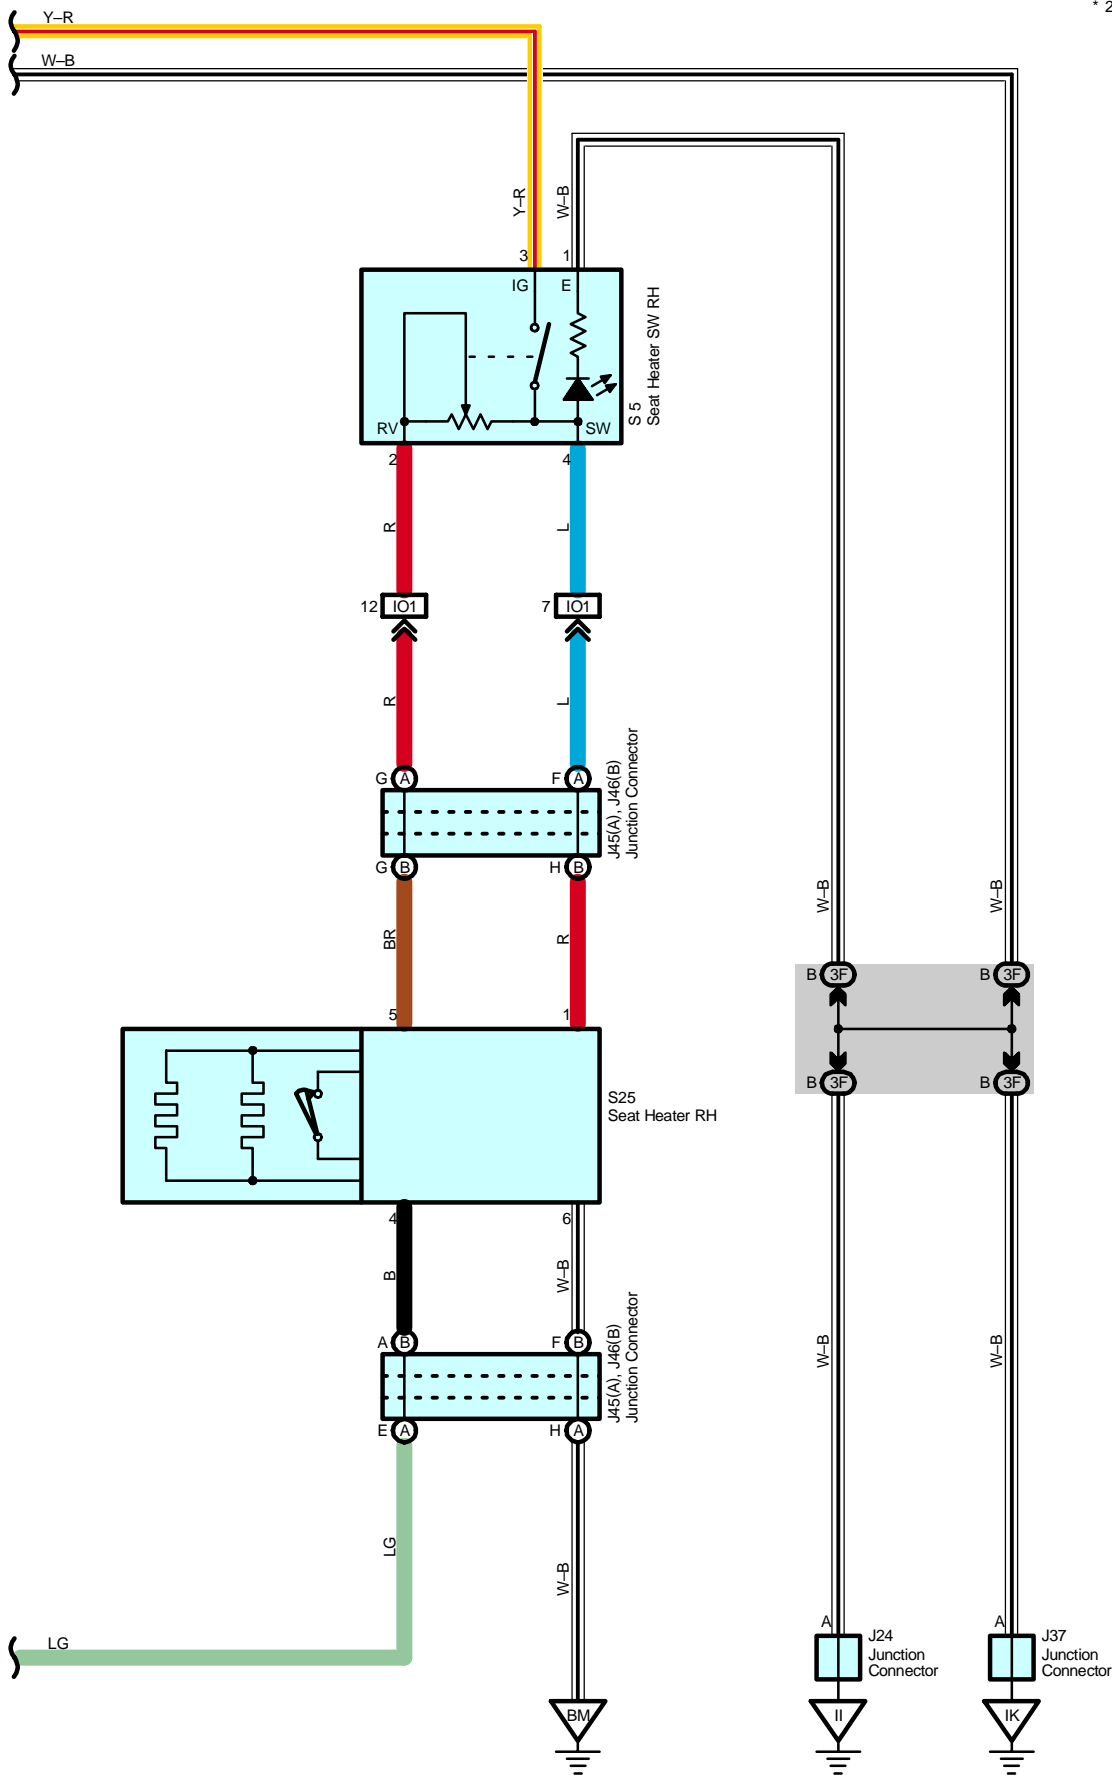

2003 4RUNNER (EWD514U)

Seat Heater

Service Hints

S4, S5 Seat Heater SW LH, RH

3-Ground : Approx. 12 volts with the ignition SW at ON position

1-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J7	38	J43	A 42	S4	39
J24	38	J44	B 42	S5	39
J25	38	J45	A 42	S24	42
J37	38	J46	B 42	S25	42

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3C	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3F		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IO1	52	Instrument Panel Wire and Floor Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
II	48	Instrument Panel Brace RH
IK	48	Right Kick Panel
BL	54	Floor Seat Crossmember LH
BM	54	Floor Seat Crossmember RH

