

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 4	Body ECU	90980-12151
A 2	A/C Lock Sensor	90980-11016	B 5	Body ECU	90980-12149
	A/C Magnetic Clutch		B 6	Body ECU	90980-12150
A 3	A/T Fluid Temp. Sensor	90980-11025	B 7	Back Door Courtesy SW	90980-11452
A 4	ABS & BA & TRAC & VSC Actuator	90980-11151		Back Door Half Latch SW	
A 5	ABS & BA & TRAC & VSC Actuator	90980-10895		Back Door Lock Detection SW	
A 6	ABS & BA & TRAC & VSC Actuator	90980-11413		Back Door Lock Motor	
A 7	ABS & BA & TRAC & VSC Actuator	90980-11009	B 8	Back Door ECU	90980-10799
A 8	ABS & BA & TRAC & VSC Actuator	90980-11451	B 9	Back Door ECU	90980-11877
A 9	ABS Speed Sensor Front LH	90980-11003	B10	Back Door Opener SW	90980-11178
A10	ABS Speed Sensor Front RH			License Plate Light	
A11	ADD Actuator	90980-11858	B11	Back Door Power Window Motor	90980-10797
A12	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	B12	Buckle SW LH	90980-12257
A13	Air Fuel Ratio Sensor (Bank 2 Sensor 1)			Seat Position Airbag Sensor	
A14	Airbag Sensor Front LH	90980-11856	B13	Buckle SW RH	90980-10795
A15	Airbag Sensor Front RH			Occupant Detection Sensor	
A16	A/C Control Assembly	90980-12150	C 1	Camshaft Position Sensor	90980-10947
A17	A/C Control Assembly	90980-12149	C 2	Camshaft Timing Oil Control Valve LH	90980-11162
A18	A/C Evaporator Temp. Sensor	90980-11918	C 3	Camshaft Timing Oil Control Valve RH	
A19	A/C Room Temp. Sensor		C 4	Crankshaft Position Sensor (1GR-FE)	90980-12028
A20	A/C Solar Sensor			Crankshaft Position Sensor (2UZ-FE)	90980-11162
A21	A/C Solar Sensor		90980-11987	C 5	Center Speaker
A22	A/T Shift Lever Illumination	90980-12063	C 6	Cigarette Lighter	90980-10760
A23	Absorber Control SW	90980-10789	C 7	Cigarette Lighter Illumination	90980-11148
A24	Accel Position Sensor	90980-11858	C 8	Combination Meter	82824-35040
A25	Air Inlet Control Servo Motor	90980-11909	C 9	Combination Meter	82824-35030
A26	Air Mix Control Servo Motor		C10	Combination Meter	82824-35040
A27	Air Mix Control Servo Motor LH		C11	Combination Meter	82824-35030
A28	Air Mix Control Servo Motor RH		C12	Combination SW	90980-11672
A29	Air Vent Mode Control Servo Motor		C13	Combination SW	90980-12183
A30	Airbag Sensor Assembly		82824-50160	C14	Combination SW
A31	Airbag Sensor Assembly	90980-11869	C15	Cup Holder Illumination	90980-11299
A32	Airbag Sensor Assembly	90980-11872	C16	Curtain Shield Airbag Squib LH	90980-12219
A33	Airbag Sensor Assembly	82824-50150		C17	
A34	Airbag Sensor Assembly	90980-11867	D 1	Data Link Connector 3	90980-11978
A35	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D 2	Daytime Running Light Relay	90980-10803
	A36			Airbag Squib (Steering Wheel Pad)	
A37	Antenna Amplifier	90980-10870	D 3	Defogger SW	90980-11911
A38	Ashtray Illumination	90980-12111		Heater Control Panel	
A39	Automatic Light Control Sensor	90980-11107		Passenger Seat Belt Warning Light	
A40	ABS Speed Sensor Rear LH	90980-11900		Security Indicator Light	
A41	ABS Speed Sensor Rear RH		D 4	Diff. Lock SW	90980-11013
B 1	Back Door Power Window Control SW	90980-10957	D 5	Downhill Assist Control SW	90980-12262
B 2	Blower Motor	90980-10385	D 6	DVD Automatic Changer	
B 3	Blower Motor Controller	90980-11676	D 7	Door Control Receiver	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D 8	Door Courtesy Light Front LH	90980-11148	F14	Fuel Pump	90980-11077
D 9	Door Courtesy Light Front RH			Fuel Sender	
D10	Door Courtesy Light Rear LH		G 1	Generator	90980-09365
D11	Door Courtesy Light Rear RH		G 2	Generator	90980-11964
D12	Door Courtesy SW Front LH	90980-10871	G 3	Glove Box Light	90980-11148
D13	Door Courtesy SW Front RH		H 1	Headlight LH (High)	90980-11095
D14	Door Courtesy SW Rear LH		H 2	Headlight LH (Low)	90980-11096
D15	Door Courtesy SW Rear RH		H 3	Headlight RH (High)	90980-11095
D16	Door Key Lock and Unlock SW Front LH	90980-12226	H 4	Headlight RH (Low)	90980-11096
	Door Lock Detection SW Front LH		H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
	Door Lock Motor Front LH		H 6	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D17	Door Lock Control SW Front LH	90980-12122	H 7	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
	Power Window Master SW		H 8	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
D18	Door Lock Control SW Front RH	90980-10797	H 9	Horn (High)	90980-10619
D19	Door Lock Detection SW Front RH	90980-12226	H10	Horn (Low)	
	Door Lock Motor Front RH		H11	Hazard SW	90980-10789
D20	Door Lock Detection SW Rear LH		H12	Height Control SW	90980-10797
	Door Lock Motor Rear LH		H13	Height Control Compressor	90980-11156
D21	Door Lock Detection SW Rear RH	90980-10935	H14	Height Control Motor	90980-10990
	Door Lock Motor Rear RH		H15	Height Control Sensor Rear LH	90980-11016
D22	Door Speaker Front LH	H16	Height Control Sensor Rear RH		
D23	Door Speaker Front RH	90980-10935	H17	Height Control Valve	90980-11143
E 1	Electronically Controlled Transmission Solenoid (1GR-FE)	90980-10891	H18	High Mounted Stop Light (w/ Rear Spoiler)	90980-11272
	Electronically Controlled Transmission Solenoid (2UZ-FE)	90980-12293		High Mounted Stop Light (w/o Rear Spoiler)	90980-11162
E 2	Engine Coolant Temp. Sensor (1GR-FE)	90980-10735	I 1	Ignition Coil and Igniter No.1	90980-11885
	Engine Coolant Temp. Sensor (2UZ-FE)	90980-10736	I 2	Ignition Coil and Igniter No.2	
E 3	Engine Hood Courtesy SW	90980-10942	I 3	Ignition Coil and Igniter No.3	
E 4	Engine Control Module	90980-12144	I 4	Ignition Coil and Igniter No.4	
E 5	Engine Control Module	90980-12145	I 5	Ignition Coil and Igniter No.5	
E 6	Engine Control Module	90980-12143	I 6	Ignition Coil and Igniter No.6	
E 7	Engine Control Module	90980-12146	I 7	Ignition Coil and Igniter No.7	
E 8	Engine Control Module	90980-12142	I 8	Ignition Coil and Igniter No.8	
F 1	Front Fog Light LH	90980-11096	I 9	Injector No.1 (1GR-FE)	90980-11875
	Front Fog Light RH			Injector No.1 (2UZ-FE)	90980-11153
F 2	Front Fog Light LH	90980-11156	I10	Injector No.2 (1GR-FE)	90980-11875
F 3	Front Parking Light LH			Injector No.2 (2UZ-FE)	90980-11153
F 4	Front Parking Light RH	90980-11020	I11	Injector No.3 (1GR-FE)	90980-11875
F 5	Front Turn Signal Light LH			Injector No.3 (2UZ-FE)	90980-11153
F 6	Front Turn Signal Light RH	90980-11599	I12	Injector No.4 (1GR-FE)	90980-11875
F 7	Front Wiper Motor			Injector No.4 (2UZ-FE)	90980-11153
F 8	Fuel Pump Resistor	90980-11156	I13	Injector No.5 (1GR-FE)	90980-11875
F 9	4WD Control ECU	90980-12149		Injector No.5 (2UZ-FE)	90980-11153
F10	4WD Control ECU	90980-12150	I14	Injector No.6 (1GR-FE)	90980-11875
F11	4WD Control SW	90980-11909		Injector No.6 (2UZ-FE)	90980-11153
F12	Foot Light LH	90980-11075	I15	Injector No.7	90980-11153
F13	Foot Light RH		I16	Injector No.8	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I17	Ignition Key Cylinder Light	90980-12092	J42	Junction Connector	90980-11542
	Transponder Key Amplifier		J43	Junction Connector	90980-11661
I18	Ignition SW	90980-11615	J44	Junction Connector	
I19	Inner Mirror	90980-11794	J45	Junction Connector	
I20	Interior Light	90980-12321	J46	Junction Connector	
J 1	Junction Connector	90980-11915	K 1	Knock Sensor 1 (1GR-FE)	90980-11875
J 2	Junction Connector	90980-11661		Knock Sensor 1 (2UZ-FE)	90980-11166
J 3	Junction Connector		90980-11915	K 2	Knock Sensor 2 (1GR-FE)
J 4	Junction Connector	Knock Sensor 2 (2UZ-FE)			90980-11166
J 5	Junction Connector	90980-10976	K 3	Key Interlock Solenoid	90980-10794
J 6	Junction Connector	90980-11915		Unlock Warning SW	
J 7	Junction Connector	90980-11542	L 1	Low Pressure Tank Valve	90980-11156
J 8	Junction Connector	90980-11915	L 2	Luggage Compartment Light	90980-12321
J 9	Junction Connector		L 3	Lumbar Support Control SW (Driver's Seat)	90980-10789
J10	Junction Connector	90980-11661	M 1	Mass Air Flow Meter	90980-11317
J11	Junction Connector		M 2	Main SW	90980-10957
J12	Junction Connector		M 3	Mirror Heater LH	90980-12189
J13	Junction Connector			Remote Control Mirror LH	
J14	Junction Connector		M 4	Mirror Heater RH	90980-12189
J15	Junction Connector			Remote Control Mirror RH	
J16	Junction Connector		M 5	Moon Roof Control ECU	90980-10997
J17	Junction Connector		N 1	Noise Filter (Ignition No.1)	90980-10843
J18	Junction Connector	N 2	Noise Filter (Ignition No.2)		
J19	Junction Connector	90980-11915	N 3	Navigation ECU	90980-11923
J20	Junction Connector		N 4	Navigation ECU	90980-11973
J21	Junction Connector		O 1	Oil Pressure SW	90980-11363
J22	Junction Connector	90980-11661	O 2	ODO/Trip SW	90980-11909
J23	Junction Connector			Turn Signal Indicator Light	
J24	Junction Connector	90980-10976	P 1	Park/Neutral Position SW	90980-11784
J25	Junction Connector	90980-10803	P 2	Power Steering Oil Pressure SW	90980-11428
J26	Junction Connector	90980-11542	P 3	Pressure SW	90980-11149
J27	Junction Connector		P 4	Parking Brake SW	90980-10871
J28	Junction Connector	90980-11915	P 5	Power Outlet (115V)	90980-10601
J29	Junction Connector		P 6	Power Outlet (Front)	90980-10860
J30	Junction Connector		P 7	Moon Roof Control SW	90980-10789
J31	Junction Connector	Personal Light			
J32	Junction Connector	90980-11661	P 8	Power Outlet (Rear)	90980-10760
J33	Junction Connector		P 9	Power Window Control SW Front RH	90980-10789
J34	Junction Connector		P10	Power Window Control SW Rear LH	
J35	Junction Connector	90980-11915	P11	Power Window Control SW Rear RH	
J36	Junction Connector	90980-10976	P12	Power Window Motor Front LH	90980-10797
J37	Junction Connector		P13	Power Window Motor Front RH	
J38	Junction Connector	90980-11542	P14	Power Window Motor Rear LH	
J39	Junction Connector	90980-11915	P15	Power Window Motor Rear RH	
J40	Junction Connector	90980-11661	P16	Pretensioner LH	90980-12253
J41	Junction Connector		P17	Pretensioner RH	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number	
P18	Power Seat Control SW (Driver's Seat)	90980-10997	S 7	Skid Control ECU	90980-11638	
P19	Power Seat Control SW (Front Passenger's Seat)		S 8	Skid Control ECU	90980-11637	
P20	Power Seat Motor (Driver's Seat Front Vertical Control)		S 9	Skid Control ECU	90980-11476	
P21	Power Seat Motor (Driver's Seat Lifter Control)	90980-10825	S10	Skid Control ECU	90980-11935	
P22	Power Seat Motor (Driver's Seat Lumbar Support Control)		S11	Steering Sensor	90980-12155	
P23	Power Seat Motor (Driver's Seat Reclining Control)		S12	Stop Light SW	90980-11118	
P24	Power Seat Motor (Driver's Seat Slide Control)		S13	Suspension Control ECU	90980-12150	
P25	Power Seat Motor (Front Passenger's Seat Reclining Control)		S14	Suspension Control ECU	90980-12149	
P26	Power Seat Motor (Front Passenger's Seat Slide Control)		S15	Suspension Control ECU	90980-12151	
R 1	Radio and Player		90980-12038	S16	Side Airbag Sensor Front LH	90980-12225
R 2	Radio and Player		90980-10997	S17	Side Airbag Sensor Front RH	
R 3	Radio and Player	90980-10996	S18	Side Airbag Sensor Rear LH		
R 4	Radio and Player	90980-12183	S19	Side Airbag Sensor Rear RH		
R 5	Radio and Player	90980-12259	S20	Squawker LH	90980-11013	
R 6	Radio and Player with Display	90980-12211	S21	Squawker RH	90980-12200	
R 7	Radio and Player with Display	90980-12209	S22	Stereo Component Amplifier	90980-10821	
R 8	Radio and Player with Display	90980-11923	S23	Stereo Component Amplifier	90980-10797	
R 9	Radio and Player with Display	90980-11909	S24	Seat Heater LH		
R10	Radio and Player with Display	90980-12259	S25	Seat Heater RH	90980-11864	
R11	Radio and Player with Display	90980-12183	S26	Side Airbag Squib LH		
R12	Radio and Player with Display	90980-12038	S27	Side Airbag Squib RH		
R13	Rheostat	90980-10797	T 1	Theft Deterrent Horn	90980-10619	
R14	Rear Combination Light LH		90980-11858	T 2	Throttle Control Motor	
R15	Rear Combination Light RH			Throttle Position Sensor		
R16	Rear Door Speaker LH	90980-10935	T 3	Transfer Shift Actuator	90980-11664	
R17	Rear Door Speaker RH		T 4	Turbine Speed Sensor	90980-11156	
R18	Rear Seat Audio Controller	90980-12267	T 5	Theft Deterrent ECU	90980-12169	
R19	Rear Speaker LH	90980-11013	T 6	Towing Brake Controller	90980-11603	
R20	Rear Speaker RH		T 7	TRAC Off SW	90980-10933	
R21	Rear Window Defogger	90980-10359	T 8	Transponder Key Computer	90980-11911	
R22	Rear Window Defogger		T 9	Turn Signal Flasher Relay	90980-10799	
R23	Rear Wiper Motor	90980-11599	T10	Tailgate Control SW	90980-11015	
R24	Rear Wiper Position SW		T11	Television Camera	90980-11292	
S 2	Starter (1GR-FE)	90980-09463	T12	Tension Reducer Solenoid LH	90980-12063	
S 3	Starter	90980-11400	T13	Tension Reducer Solenoid RH		
S 4	Seat Heater SW LH	90980-10957	T14	Towing Converter Relay	90980-11535	
S 5	Seat Heater SW RH	90980-10933	T15	Trailer Socket	82824-34030	
S 6	Shift Lock Control ECU	90980-12183	V 1	VSV (ACIS)	90980-11149	
	Transmission Control SW		V 2	VSV (EVAP)	90980-11156	
			V 3	VVT Sensor LH	90980-10947	
			V 4	VVT Sensor RH		
			V 5	VSC Warning Buzzer	90980-10906	
			V 6	Vanity Light LH	90980-12322	
			V 7	Vanity Light RH		
			V 8	Vapor Pressure Sensor	90980-11143	
			V 9	Voltage Inverter	90980-10799	

