


Cigarette Lighter

From Power Source System (See Page 58)

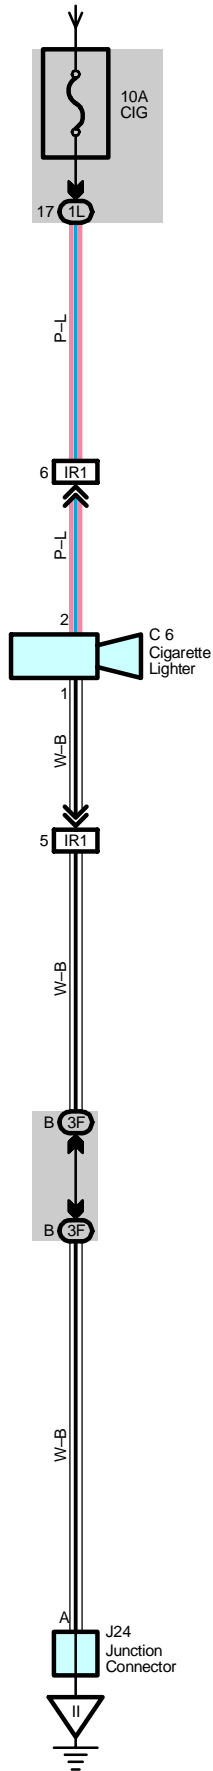

Service Hints**C6 Cigarette Lighter**

2-Ground : Approx. 12 volts with the ignition SW at ACC or ON position

1-Ground : Always continuity

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
C6	37	J24	38		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3F	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IR1	52	Instrument Panel Wire and Cigarette Wire (Rear Console)

 : **Ground Points**

Code	See Page	Ground Points Location
II	48	Instrument Panel Brace RH