

■ ELECTRONIC CONTROL SYSTEM


1. General

The electronic control system of the A750E and A750F automatic transmissions consist of the control listed below.

System	Function
Clutch Pressure Control	<ul style="list-style-type: none"> Controls the pressure that is applied directly to B₁ brake and C₁ clutch by actuating the linear solenoid valves SL1 and SL2 in accordance with the ECM signals. The solenoid valve SLT and SL1 minutely controls the clutch pressure in accordance with the engine output and driving conditions.
Line Pressure Control (See Page CH-20)	Actuates the solenoid valve SLT to control the line pressure in accordance with information from the ECM and the operating conditions of the transmission.
Engine Torque Control	Retards the engine ignition timing temporarily to improve shift feeling during up or down shifting.
Shift Timing Control	The ECM sends current to the solenoid valve S1, S2 and/or SR based on signals from each sensor and shifts the gear.
Flex Lock-up Clutch Control (See Page CH-22)	Controls the solenoid valve SLU, provides an intermediate mode between the ON/OFF operation of the lock-up clutch, and increases the operating range of the lock-up clutch to improve fuel economy.
Lock-up Timing Control	The ECM sends current to the shift solenoid valve SLU based on signals from each sensor and engages or disengages the lock-up clutch.
“N” to “D” Squat Control	When the shift lever is shifted from “N” to “D” position, the gear is temporarily shifted to 2nd and then to 1st to reduce vehicle squat.
AI (Artificial Intelligence) -SHIFT (See Page CH-23)	Based on the signals from various sensors, the ECM determines the road conditions and the intention of the driver. Thus, the shift pattern is automatically regulated to an optimal level, thus improving drivability.
Diagnosis	When the ECM detects a malfunction, the ECM makes a diagnosis and memorizes the failed section.
	All the DTC (Diagnostic Trouble Code) have been made correspond to the SAE controlled codes.
Fail-safe	Even if a malfunction is detected in the sensors or solenoids, the ECM effects fail-safe control to prevent the vehicle’s drivability from being affected significantly.


2. Construction

The configuration of the electronic control system in the '03 4Runner's A750E and A750F is as shown in the following chart.

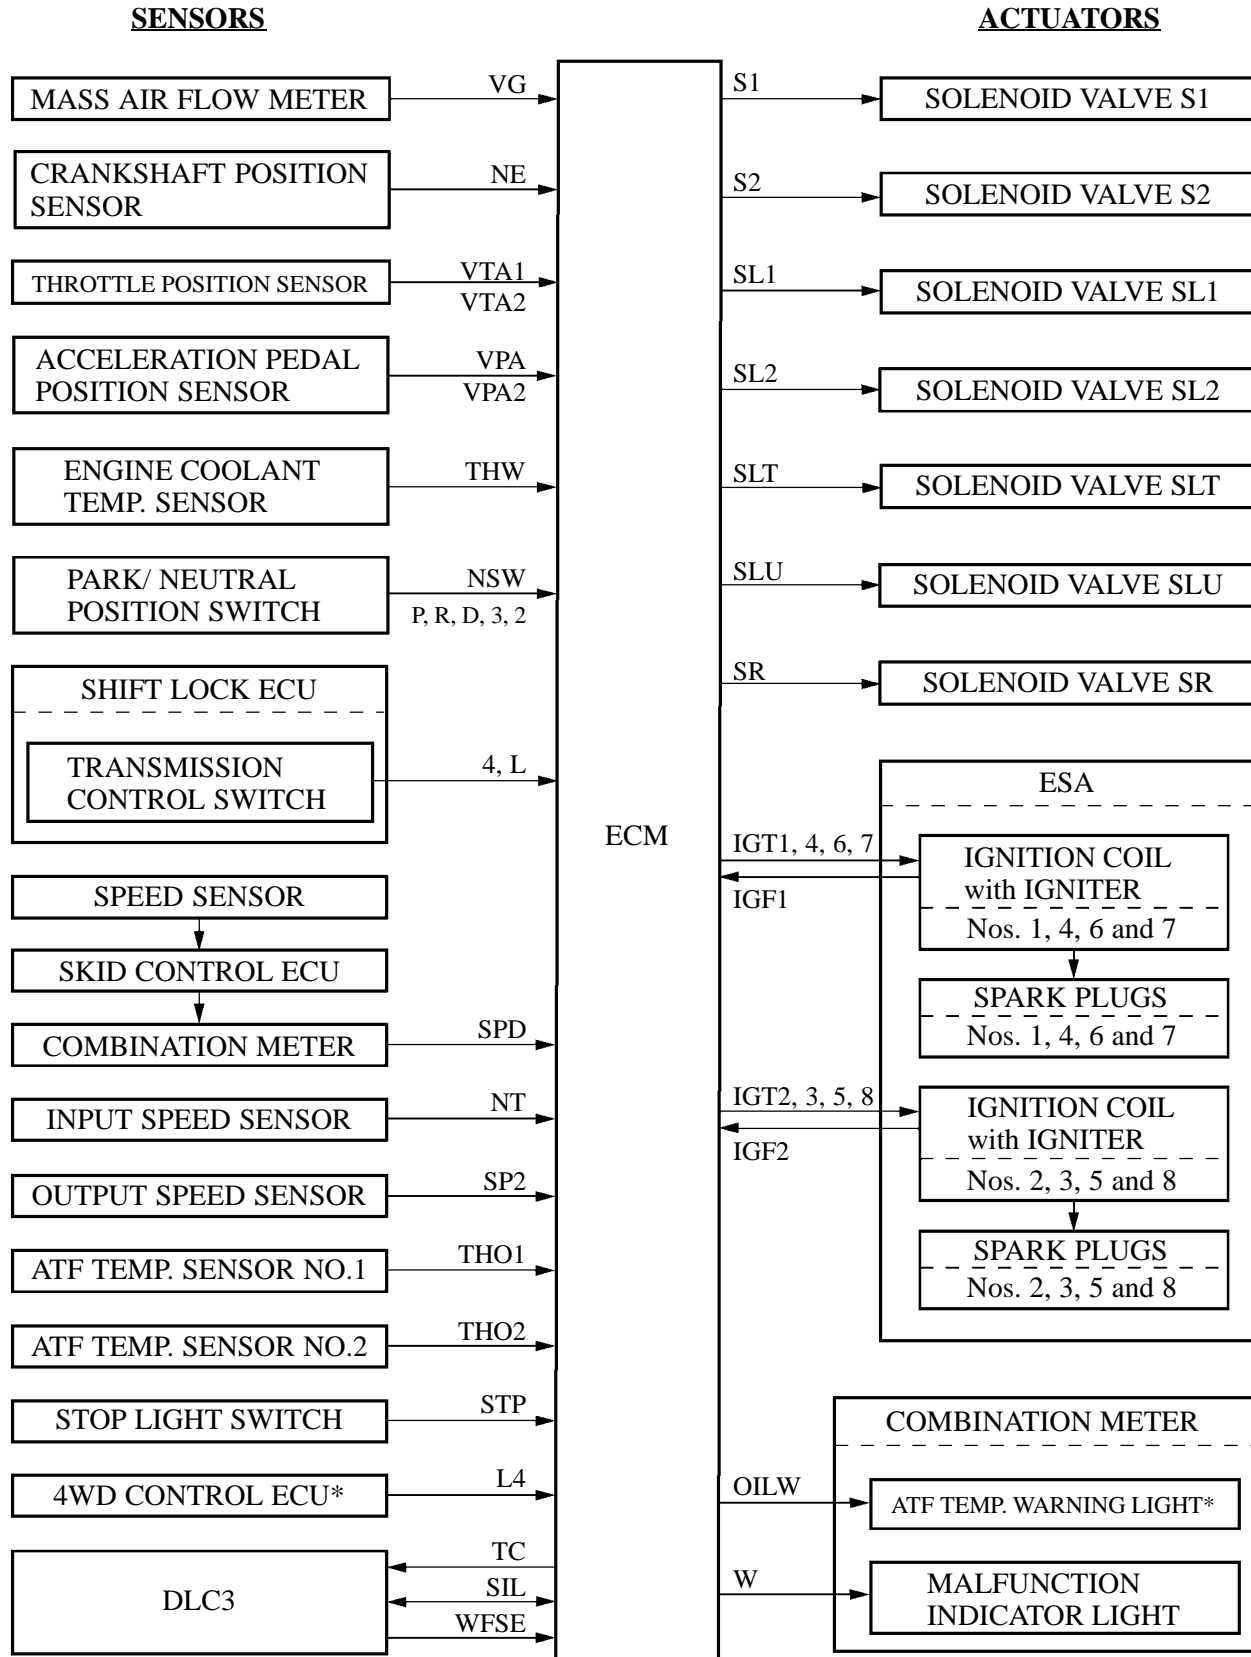

*Only for 4WD Model


3. Layout of Main Component

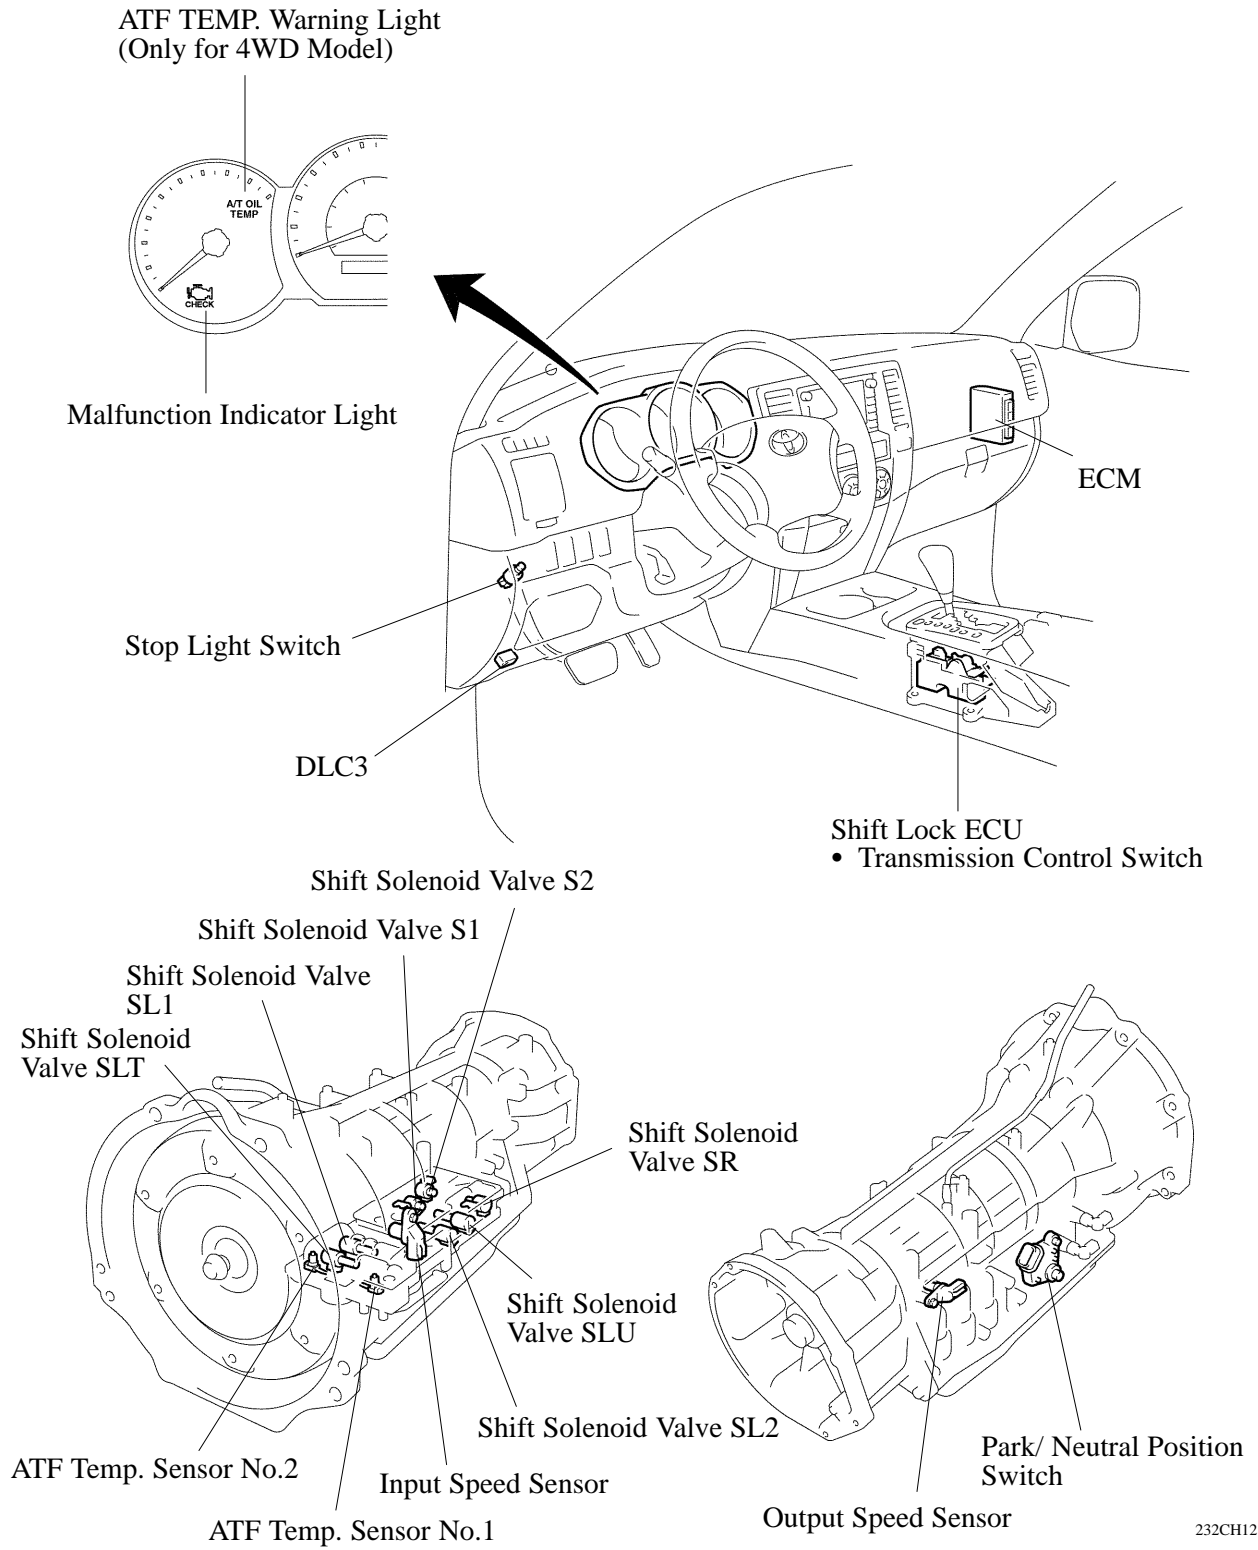

4. Construction and Operation of Main Component

ATF Temperature Sensor No.1 and No.2

- ATF temperature sensor No.1 (THO1) is used for hydraulic pressure control. This sensor is used for revision of clutches and brakes pressure to keep smooth shift quality every time.
- ATF temperature sensor No.2 (THO2) is used for shifting of the shift timing control of ECT when the ATF temperature is high. However, on the 4WD model, it is also used for the ATF temp. warning light.

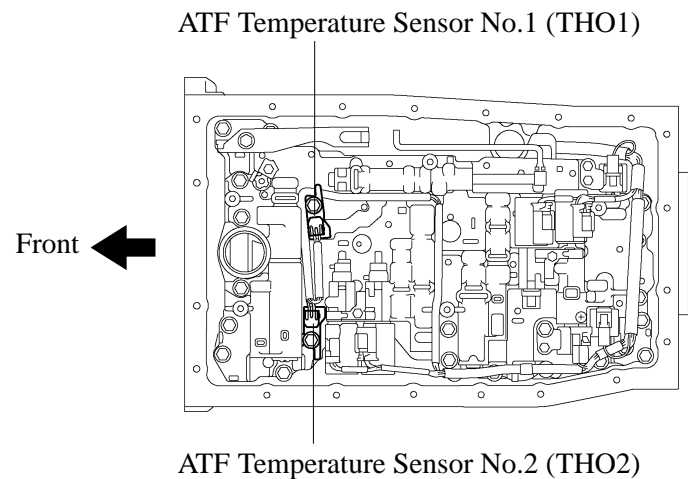


229LC132

Transmission Control Switch and Park/Neutral Position Switch

The ECM uses these switches to detect the shift position.

- The park/neutral position switch sends the P, R, N, D, 3, 2, and NSW position signals to the ECM. It also sends signals for the shift indicator light (P, R, N, and 3rd) in the combination meter.
- The transmission control switch is located in the shift lock ECU. This switch sends the 4th and L signals to the ECM. It also sends signals for the shift position indicator light (D, 4th, 2nd, and L) in the combination meter.

► Wiring Diagram ◀

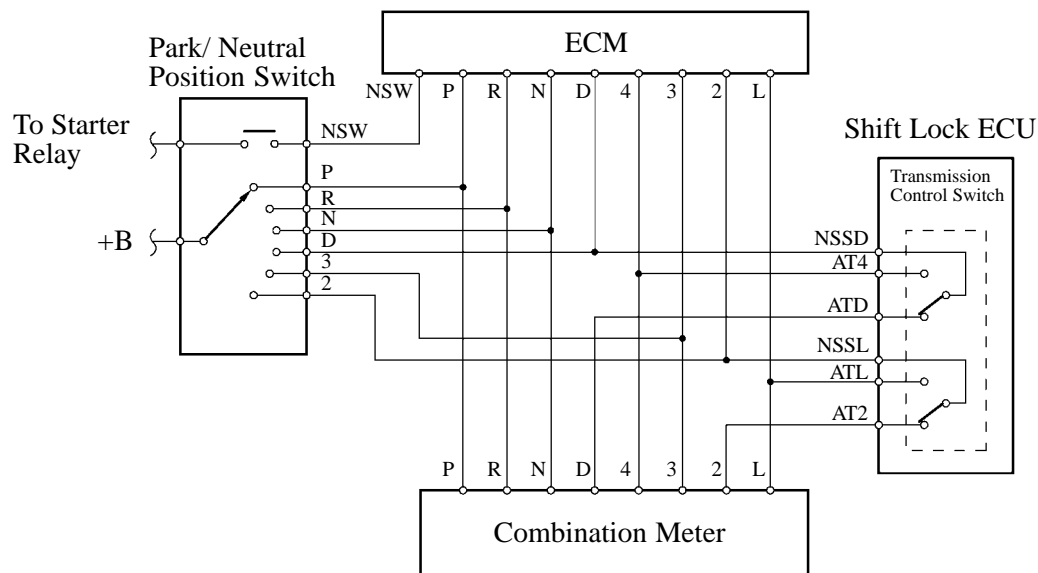


232CH92

Input Speed Sensor and Output Speed Sensor

The A750E and A750F automatic transmissions use an input speed sensor (for NT signal) and output speed sensor (for SP2 signal). Thus, the ECM can detect the timing of the shifting of the gears and appropriately control the engine torque and hydraulic pressure in response to the various conditions. These speed sensors are the pick-up coil type.


- The input speed sensor detects the input speed of the transmission. The clutch drum is used as the timing rotor for this sensor.
- The output speed sensor detects the speed of the output shaft. The parking gear on the rear planetary gear is used as the timing rotor for this sensor.

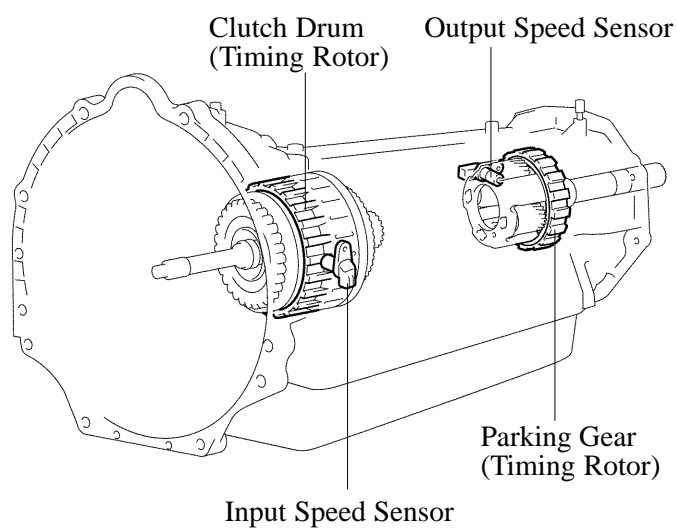

5. Clutch Pressure Control

Clutch to Clutch Pressure Control


This control is used for shifting from the 4th to 5th gear and from the 5th to 4th gear. Actuates solenoid valves SL1 and SL2 in accordance with the signals from the ECM, and guides this output pressure directly to the control valves B₁ and C₁ in order to regulate the line pressure that acts on the B₁ brake and C₁ clutch. As a result, high response and excellent shift characteristics have been realized.

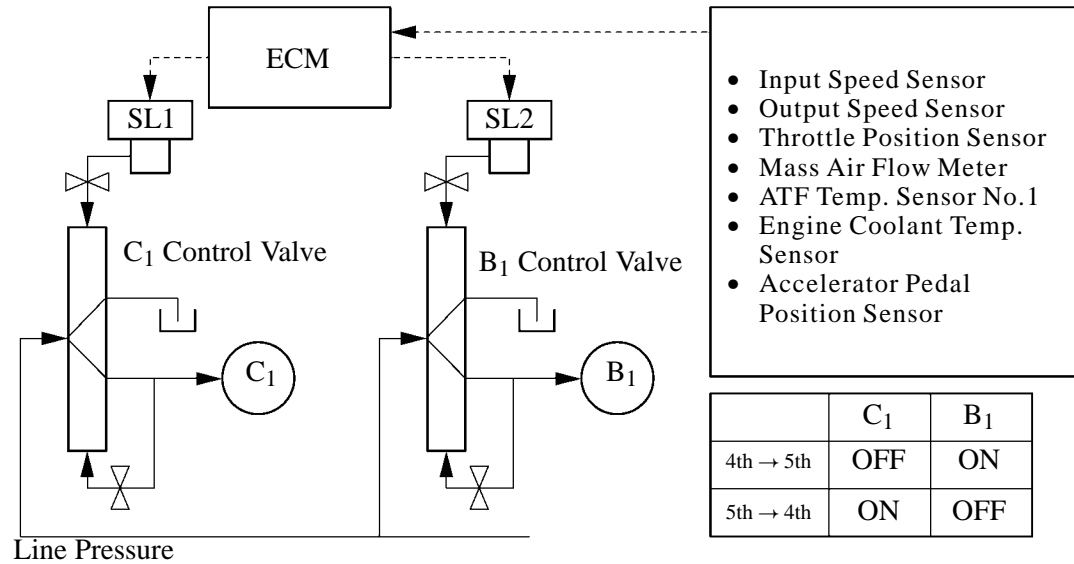

232CH141

Clutch Pressure Optimal Control

The ECM monitors the signals from various types of sensor such as the input speed sensor, allowing shift solenoid valves SLT and SL1 to minutely control the clutch pressure in accordance with engine output and driving conditions. As a result, smooth shift characteristics have been realized.

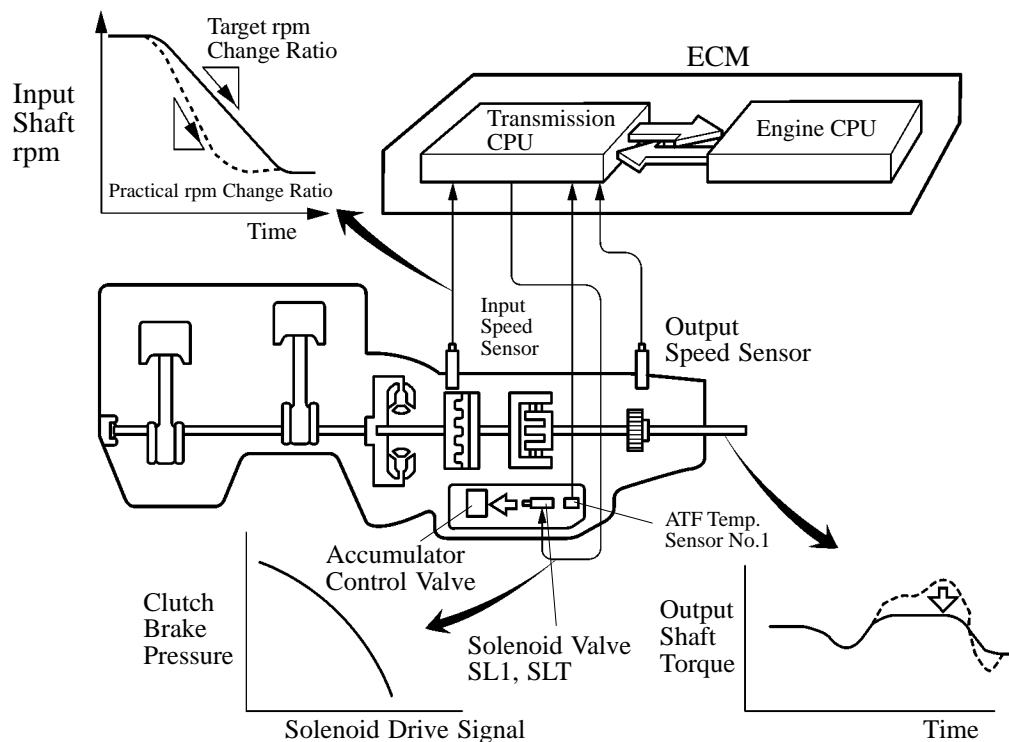


232CH140

6. Line Pressure Optimal Control


Through the use of the solenoid valve SLT, the line pressure is optimally controlled in accordance with the engine torque information, as well as with the internal operating conditions of the torque converter and the transmission.

Accordingly, the line pressure can be controlled minutely in accordance with the engine output, traveling condition, and the ATF temperature, thus realizing smooth shift characteristics and optimizing the workload in the oil pump.

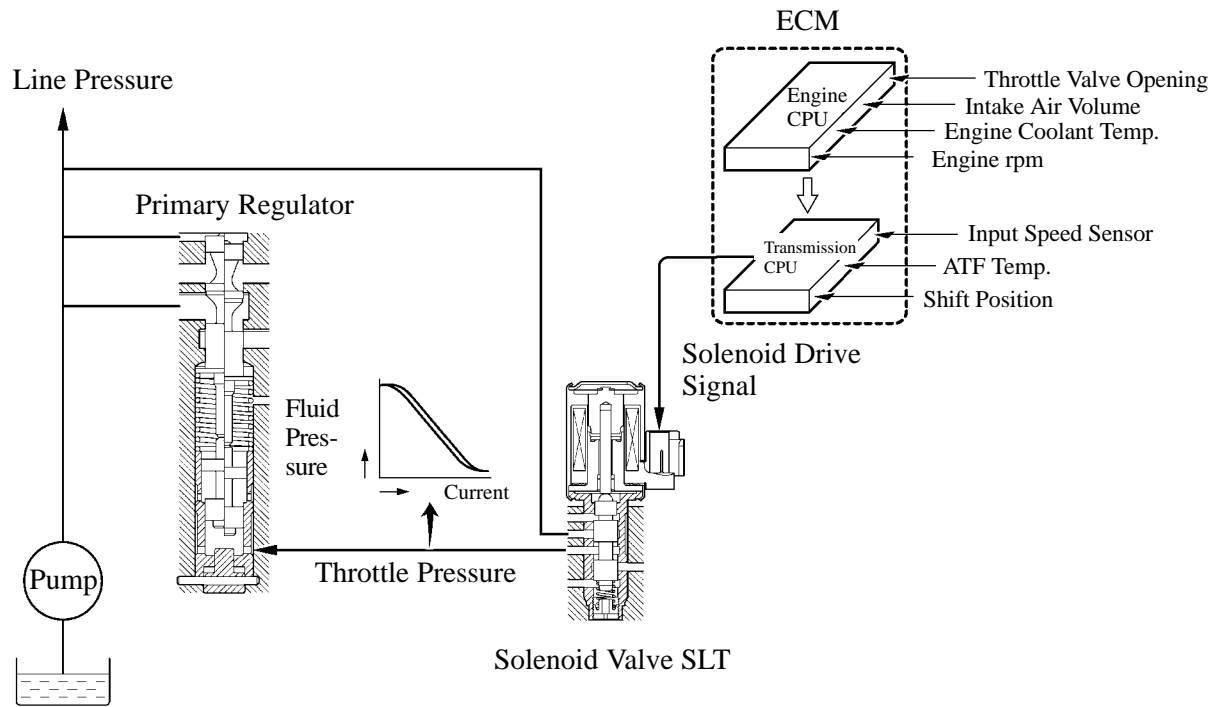


7. Flex Lock-up Clutch Control

In addition to the conventional lock-up timing control, a flex lock-up clutch control is used. In the low-to mid-speed range, this flex lock-up clutch control regulates the solenoid valve SLU to provide an intermediate mode between the ON/OFF operation of the lock-up clutch in order to improve the energy transmitting efficiency in this range. As a result, the operating range of the lock-up clutch has been increased and fuel economy has been improved. The flex lock-up clutch control operates in the 4th and 5th gears in the D range and 4th gear in the 4 range.

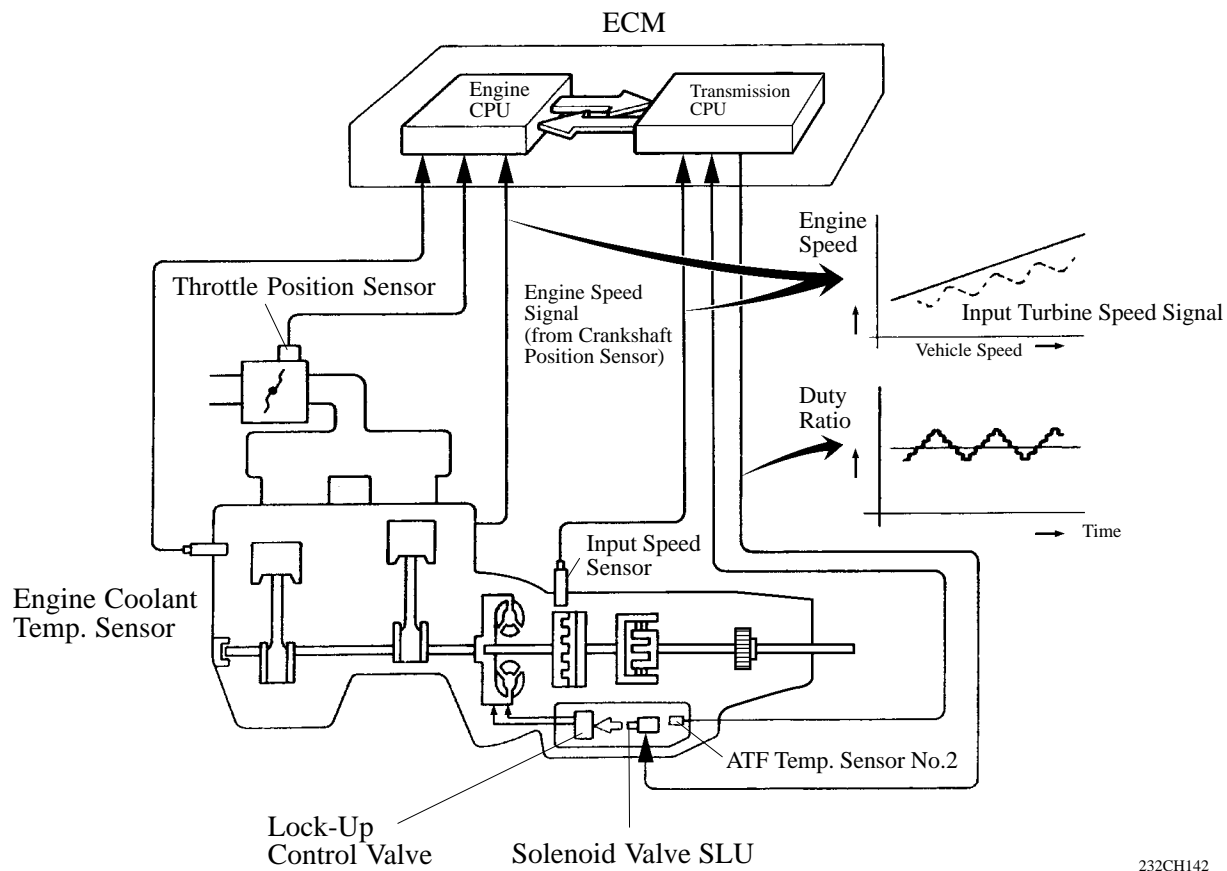

232CH142

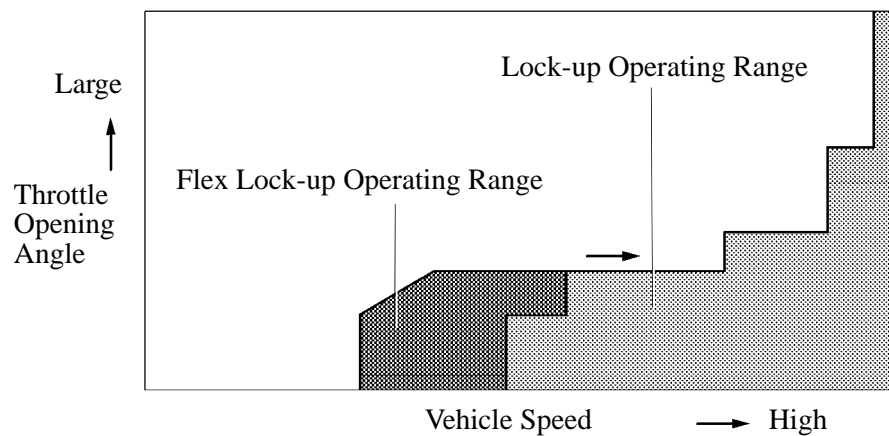


232CH159

8. AI (Artificial Intelligence)- SHIFT Control

General


In addition to the switching of the shift pattern through the pattern select switch, the AI- SHIFT control enables the ECM to estimate the road conditions and the driver's intention in order to automatically switch the optimal shift pattern. As a result, a comfortable ride has been achieved.

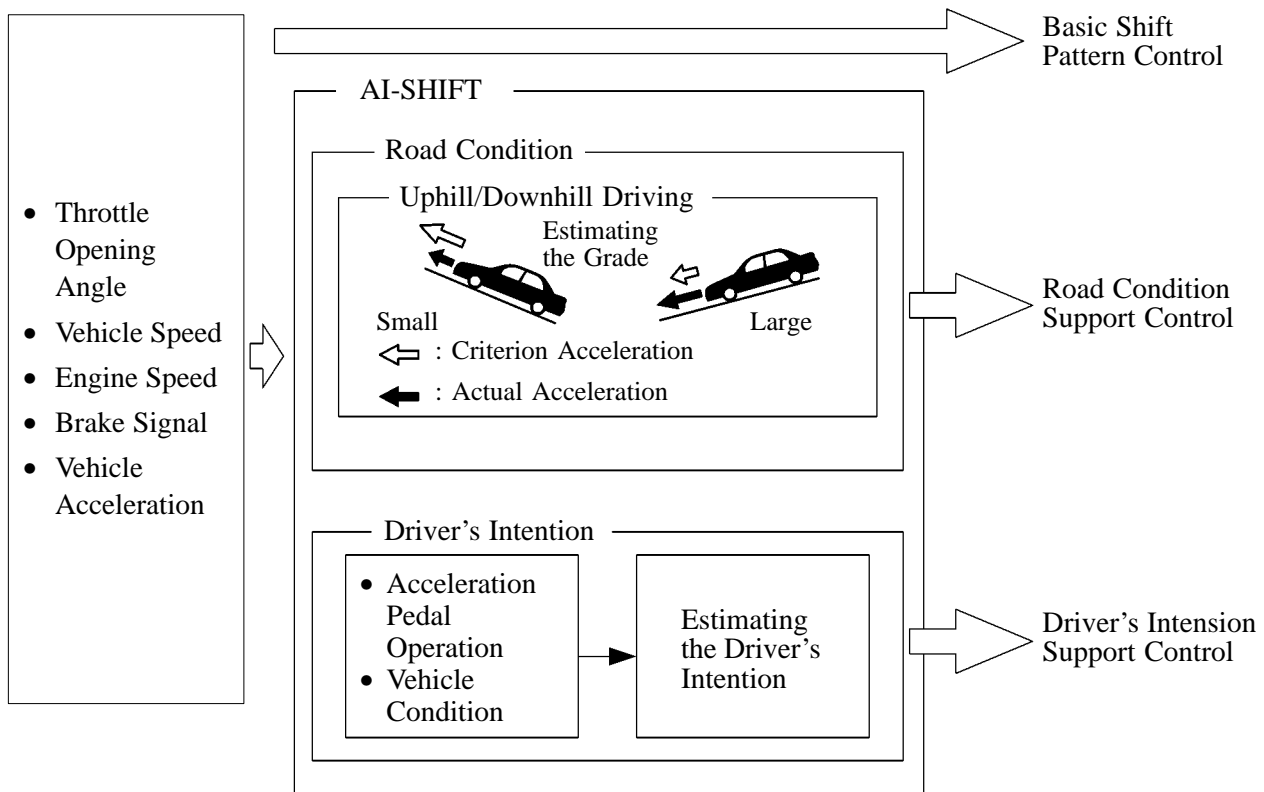

Road Condition Support Control

Under Road Condition Support Control, the ECM identifies throttle valve opening angle and the vehicle speed whether the vehicle is being driven uphill or downhill.

To achieve an optimal drive force while driving uphill, this control prevents the transmission from upshifting to the 4th or 5th gear. To achieve an optimal engine brake effect while driving downhill, this control automatically downshifts the transmission to the 4th or 3rd gear.

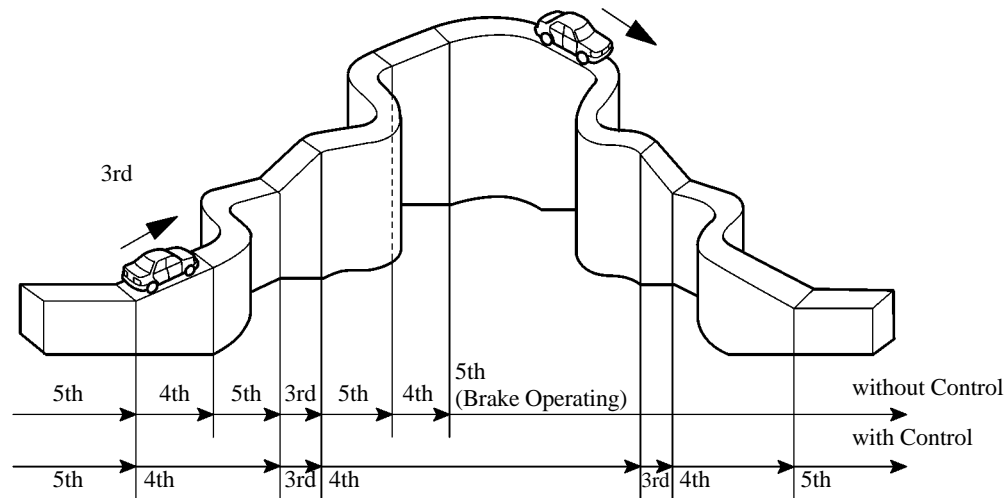

229LC183

Driver's Intention Support Control

Estimates the driver's intention based on the accelerator operation and vehicle condition to switch to a shift pattern that is well-suited to each driver, without the need to operate the shift pattern select switch.

9. Diagnosis

- When the ECM detected a malfunction, the ECM makes a diagnosis and memorizes the failed section. Furthermore, the MIL (Malfunction Indicator Lamp) in the combination meter illuminates or blinks to inform the driver.
- To comply with the OBD-II regulations, all the DTC (Diagnostic Trouble Code) have been made to correspond to the SAE controlled codes. Some of the DTC have been further divided into smaller detection areas than in the past, and new DTC have been assigned to them. For details, refer to the 2003 4Runner Repair Manual (Pub. No. RM1001U).

10. Fail Safe

This function minimizes the loss of operability when any abnormality occurs in each sensor or solenoid.

► Fail-Safe Control List ◀

Malfunction Part	Function
Output Speed Sensor (SP2)	During an output speed sensor malfunction, shift control is effected through the input speed sensor signal (SPD).
ATF Temp. Sensor No.1	During a ATF temperature sensor No.1 malfunction, 5th upshift and flex lock-up clutch control are prohibited.
Solenoid Valve S1, S2 and SR	The current to the failed solenoid valve is cut off and control is effected by operating the other solenoid valves with normal operation. Shift control is effected depending on the failed solenoid as described in the table on the next page.
Solenoid Valve SL1 and SL2	During a solenoid valve SL1 or SL2 malfunction, 5th upshift is prohibited.
Solenoid Valve SLU	During a solenoid valve SLU malfunction, the current to the solenoid valve is stopped. Because this stops lock-up control and flex lock-up control, and fuel economy decreases.
Solenoid Valve SLT	During a solenoid valve SLT malfunction, the current to the solenoid valve is stopped. Because this stops line pressure optimal control, the shift shock increases. However, shifting is effected through normal clutch pressure control.

Position	Normal						Shift Solenoid Valve S1 Malfunction					
	Shift Solenoid					Gear	Shift Solenoid					Gear
	S1	S2	SR	SL1	SL2		S1	S2	SR	SL1	SL2	
D	ON	OFF	OFF	OFF	ON	1st	×	OFF →ON	OFF	OFF	ON	4th→ 3rd
	ON	ON	OFF	OFF	ON	2nd	×	ON	OFF	OFF	ON	3rd
	OFF	ON	OFF	OFF	ON	3rd	×	ON	OFF	OFF	ON	3rd
	OFF	OFF	OFF	OFF	ON	4th	×	OFF	OFF	OFF	ON	4th
	OFF	OFF	ON	ON	OFF	5th	×	OFF	ON	ON	OFF	5th
4	ON	OFF	OFF	OFF	ON	1st	×	OFF →ON	OFF	OFF	ON	4th→ 3rd
	ON	ON	OFF	OFF	ON	2nd	×	ON	OFF	OFF	ON	3rd
	OFF	ON	OFF	OFF	ON	3rd	×	ON	OFF	OFF	ON	3rd
	OFF	OFF	OFF	OFF	ON	4th	×	OFF	OFF	OFF	ON	4th
3	ON	OFF	OFF	OFF	ON	1st	×	OFF →ON	OFF	OFF	ON→ OFF	3rd→ 3rd (E/B)
	ON	ON	OFF	OFF	ON	2nd	×	ON	OFF	OFF	ON→ OFF	3rd→ 3rd (E/B)
	OFF	ON	OFF	OFF	OFF	3rd (E/B)	×	ON	OFF	OFF	OFF	3rd (E/B)
2	ON	OFF	OFF	OFF	ON	1st	×	OFF	OFF	OFF	ON	1st
	ON	ON	ON	OFF	OFF	2nd (E/B)	×	ON	ON	OFF	OFF	3rd (E/B)
L	ON	OFF	OFF	OFF	OFF	1st (E/B)	×	OFF	OFF	OFF	OFF	1st (E/B)

Position	Shift Solenoid Valve S2 Malfunction						Shift Solenoid Valve SR Malfunction					
	Shift Solenoid					Gear	Shift Solenoid					Gear
	S1	S2	SR	SL1	SL2		S1	S2	SR	SL1	SL2	
D	ON	×	OFF	OFF	ON	1st	ON	OFF	×	OFF	ON	1st
	ON→ OFF	×	OFF	OFF	ON	1st→ 4th	ON	ON	×	OFF	ON	2nd
	OFF	×	OFF	OFF	ON	4th	OFF	ON	×	OFF	ON	3rd
	OFF	×	OFF	OFF	ON	4th	OFF	OFF	×	OFF	ON	4th
	OFF	×	ON	ON	OFF	5th	OFF	OFF	×	ON	OFF	4th
4	ON	×	OFF	OFF	ON	1st	ON	OFF	×	OFF	ON	1st
	ON→ OFF	×	OFF	OFF	ON	1st→ 4th	ON	ON	×	OFF	ON	2nd
	OFF	×	OFF	OFF	ON	4th	OFF	ON	×	OFF	ON	3rd
	OFF	×	OFF	OFF	ON	4th	OFF	OFF	×	OFF	ON	4th
3	ON	×	OFF	OFF	ON	1st	ON	OFF	×	OFF	ON	1st
	ON→ OFF	×	OFF	OFF	ON→ OFF	1st→ 3rd (E/B)	ON	ON	×	OFF	ON	2nd
	OFF	×	OFF	OFF	OFF	3rd (E/B)	OFF	ON	×	OFF	OFF →ON	3rd (E/B) →3rd
2	ON	×	OFF	OFF	ON	1st	ON	OFF	×	OFF	ON	1st
	ON→ OFF	×	ON	OFF	OFF →ON	2nd (E/B) →4th	ON	ON	×	OFF	OFF	2nd
L	ON	×	OFF	OFF	OFF	1st (E/B)	ON	OFF	×	OFF	OFF	1st (E/B)

E/B: Engine Brake

Position	Shift Solenoid Valve S1 and S2 Malfunction						Shift Solenoid Valve S1 and SR Malfunction					
	Shift Solenoid					Gear	Shift Solenoid					Gear
	S1	S2	SR	SL1	SL2		S1	S2	SR	SL1	SL2	
D	×	×	OFF	OFF	ON	4th	×	OFF →ON	×	OFF	ON	4th→ 3rd
	×	×	OFF	OFF	ON	4th	×	ON	×	OFF	ON	3rd
	×	×	OFF	OFF	ON	4th	×	ON	×	OFF	ON	3rd
	×	×	OFF	OFF	ON	4th	×	OFF	×	OFF	ON	4th
	×	×	ON	ON	OFF	5th	×	OFF	×	ON→ OFF	OFF →ON	4th
4	×	×	OFF	OFF	ON	4th	×	OFF →ON	×	OFF	ON	4th→ 3rd
	×	×	OFF	OFF	ON	4th	×	ON	×	OFF	ON	3rd
	×	×	OFF	OFF	ON	4th	×	ON	×	OFF	ON	3rd
	×	×	OFF	OFF	ON	4th	×	OFF	×	OFF	ON	4th
3	×	×	OFF	OFF	ON→ OFF	3rd→ 3rd (E/B)	×	OFF →ON	×	OFF	ON	3rd
	×	×	OFF	OFF	ON→ OFF	3rd→ 3rd (E/B)	×	ON	×	OFF	ON	3rd
	×	×	OFF	OFF	OFF	3rd (E/B)	×	ON	×	OFF	OFF →ON	3rd (E/B) →3rd
2	×	×	OFF	OFF	ON	1st	×	OFF	×	OFF	ON	1st
	×	×	ON	OFF	OFF →ON	4th	×	ON	×	OFF	OFF	2nd
L	×	×	OFF	OFF	OFF	1st (E/B)	×	OFF	×	OFF	OFF	1st (E/B)

Position	Shift Solenoid Valve S2 and SR Malfunction						Shift Solenoid Valve S1, S2 and SR Malfunction					
	Shift Solenoid					Gear	Shift Solenoid					Gear
	S1	S2	SR	SL1	SL2		S1	S2	SR	SL1	SL2	
D	ON	×	×	OFF	ON	1st	×	×	×	OFF	ON	4th
	ON→ OFF	×	×	OFF	ON	1st→ 4th	×	×	×	OFF	ON	4th
	OFF	×	×	OFF	ON	4th	×	×	×	OFF	ON	4th
	OFF	×	×	OFF	ON	4th	×	×	×	OFF	ON	4th
	OFF	×	×	ON→ OFF	OFF →ON	4th	×	×	×	ON→ OFF	OFF →ON	4th
4	ON	×	×	OFF	ON	1st	×	×	×	OFF	ON	4th
	ON→ OFF	×	×	OFF	ON	1st→ 4th	×	×	×	OFF	ON	4th
	OFF	×	×	OFF	ON	4th	×	×	×	OFF	ON	4th
	OFF	×	×	OFF	ON	4th	×	×	×	OFF	ON	4th
3	ON	×	×	OFF	ON	1st	×	×	×	OFF	ON	3rd
	ON→ OFF	×	×	OFF	ON	1st→ 3rd	×	×	×	OFF	ON	3rd
	OFF	×	×	OFF	OFF →ON	3rd (E/B) →3rd	×	×	×	OFF	OFF →ON	3rd (E/B) →3rd
2	ON	×	×	OFF	ON	1st	×	×	×	OFF	ON	1st
	ON	×	×	OFF	OFF →ON	1st (E/B) →1st	×	×	×	OFF	OFF →ON	1st (E/B) →1st
L	ON	×	×	OFF	OFF	1st (E/B)	×	×	×	OFF	OFF	1st (E/B)

E/B: Engine Brake